

VESSEL

ESD PRODUCT CATALOG



VESSEL Co., Inc.

17-25, Fukae-Kita 2-chome, Higashinari-ku, Osaka 537-0001 JAPAN
Tel : + 81 (0) 6 6976 7778 Fax : + 81 (0) 6 6972 9441
E-mail : export@vessel.co.jp URL : www.vessel.co.jp/english

VESSEL EUROPE

contact@vessel-europe.com
www.vessel-europe.com

Distributed by

24022223.012

- The specifications, dimensions, and others may be subject to change without prior notice.
- The ionizing performance shown in this catalogue is according to our measurement environments, and the results may differ depending on the actual using environment.

VESSEL, the ionizing and dust elimination expert, helps solve your quality problems.

Product quality is very important issue at manufacturing sites. Since 2000, VESSEL has focused on solutions for static electricity and dust elimination, with aspiration for improvement in the product quality of all customers. VESSEL, the ionizing and dust elimination expert, is ready to help.

3 reasons why VESSEL ionizers are chosen

1

Abundant line-up of products

VESSEL's line-up of reliable and wide range from fan, gun, and bar-type air blow ionizers, EPA mats and wrist straps that prevent static discharge, to adhesive mats that prevent dust from scattering. Our products provide solutions to your problems in relation to static electricity and dust.

2

User-friendly products

To provide optimum products for production sites, our design is oriented in the ease-of-use. VESSEL aims for user convenience in various applications.

3

Direct support from our specialists


Our static elimination and dust removal specialists will visit your production site to propose the best available products. Customization is also available upon request.



THE STATIC ELECTRICITY



Theory

The static electricity comes from the transfer of electrons between two or more atoms becoming electrically unbalanced.

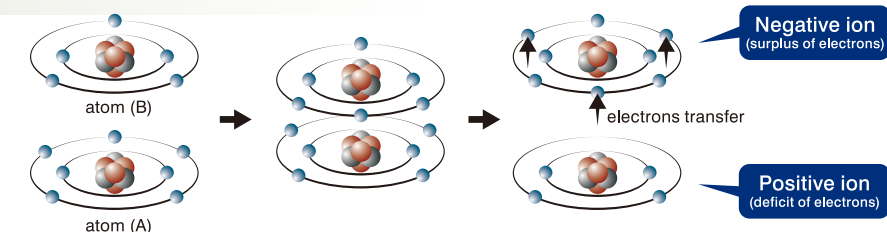

How is it created?

The static electricity is created after contact between two materials (one of which at least is an insulator). The static electricity level depends on humidity, materials, as well as on the pressure, the time, and the surface of contact. An electric voltage of several kV might be easily generated.

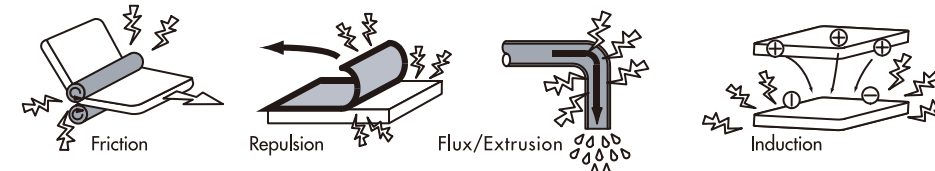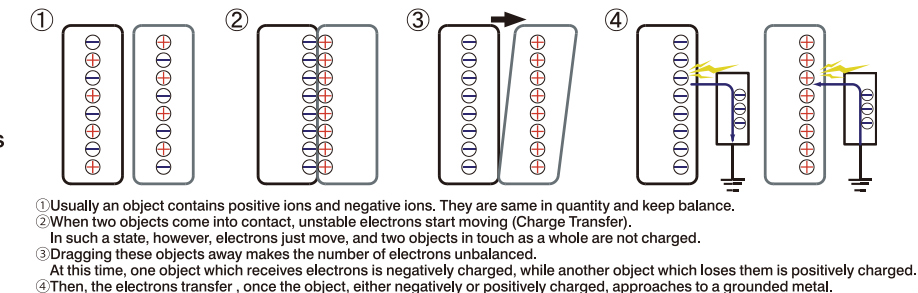

Triboelectric series


The Triboelectric Series chart shows the relative positive or negative charge of various materials.



Consequences

Three types of problems can result from static electricity:

- Apparition of electric arcs, which can damage the electronic circuits,
- Dust attraction, which can lead to unwanted defaults after parts painting or cause hygiene and cleanliness problems,
- And attraction or repulsion of other materials, which can cause, for instance, printing problems due to the repulsion of the ink or labeling problems due to the unwanted repulsion or attraction of the paper when being positioned.

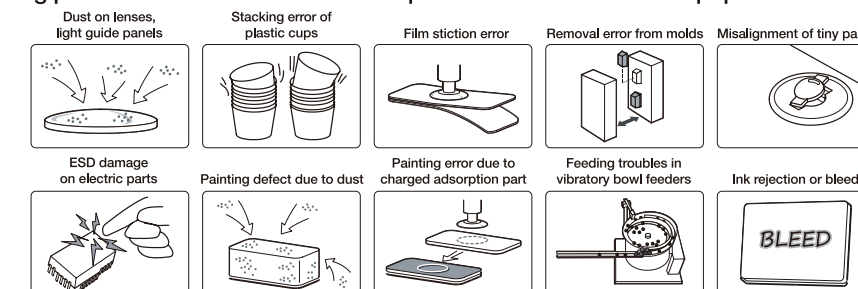

How is it eliminated?

Different methods are used:





- The voltage of the part will be equal to 0V. However in certain cases, in order to avoid any sudden discharge, which could lead to electric arcs, in order to avoid any sudden discharge, which could lead to electric arcs, it is necessary to use dissipative material with a controlled conductivity.

Otherwise use an ionizer:

- The ionizer will send positive and negative ions to be combined with the positive and negative charges on the targeted surface. The ions are created thanks to the corona discharge principle. The static electricity elimination is made without any contact.

Realize ionizing and clean control from your fingertips to your toes.

VESSEL's line-up of a reliable and wide range of anti-static products.

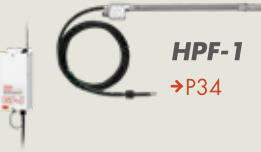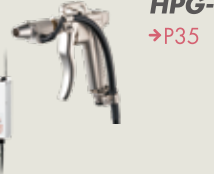Fan Type	Nozzle Type	Gun Type	Bar Type	Ion Parts Cleaner	EPA Working Mat	Clean Walker	Options
Mount on a cell workbench, parts stock shelf, or belt conveyor. Switch the fan speed for neutralization in the close or far distance.  <Mini> F-6BF-E →P6  <Mini> F-6RCL-E F-6RST-E →P6  <Standard> F120R-E F120S-E →P7  <Wide width> CF-300-E →P8  CF-600-E →P8  L-90-E →P9	Assemble into manufacturing devices for pinpoint neutralization and dust-elimination within cramped spaces. Just replace the nozzle to use for various applications (N-1, N-3).  N-1 N-3 →P12 <High Power Series>  HPN-1 →P33  HPF-1 →P34	Ideal for air cleaning and neutralization of parts after having received and before assembling them. Also good for resin molded parts before painting them.  G7R-E →P14  G-2-E →P15  G-9 →P16 <High Power Series>  HPG-1 →P35	Suitable for neutralization in clean rooms, and for prevention of static electricity on films moving at high speeds.  <Built-in power supply> C-series →P19  SL-series →P21  <High Power Series> HPB-series →P36	Air cleaning in non-static area. Scattered dust is collected by a dust collector. Our Ion Parts Cleaner maintains the clean environment.  <Gel Dust Collection Type> IPC-A4 IPC-A3 →P24  IPC-250CR →P25  <Vertical Type> IPC-V4 →P26	ESD control mats for use in areas where parts are handled, assembled, repaired and tested.  Conductive Rubber Mat →P28 <Wrist Strap>  EPS-05 →P28 <Grounding Kit>  EPS-GK →P28 <Conductive Anti-Fatigue Mat>  AF-45 AF-90 →P29 <Surface resistance checker>  SRC-01 →P29 <Electrostatic Field Meter>  Eye-02 →P30	Adhesive mat placed before a clean room, collects dust off soles of work shoes. Non-peeling, washable type.  <Clean Walker> CW-900B →P32	Options and replacement parts.  Needle Electrode Unit  Needle Electrode Unit  AC Adapter  Filter  Standard Nozzle  Branch Box  Brush  Needle Electrode  Speed Controller  Silent Nozzle  Adhesive Gel Sheet
→P05	→P11 High Power Series P33	→P13 High Power Series P35	→P17 High Power Series P36	→P23	→P27	→P31	→P37

Measurement Conditions

Ion balance : 300 mm from the front of the device at maximum airflow setting (As of ionizing gun and nozzle, measured at 150mm from the front)
Decay time : 300 mm from the front of the device at maximum airflow setting
(Decay time from ±1000V to ±100V)(Charged plate monitor: 150 mm × 150 mm square, 20 pF)
Noise level : 1 m from the front of the device at maximum airflow setting

※Measurement values given in this catalog are typical values from a sample unit, and do not guarantee the performance.

Fan Type



F-6BF-E

Exquisite wind for secure ion transfer without scattering dust.

Decay time 8.0 sec. or less



F-6RCL-E/F-6RST-E

Compact. Can install in any location. Pinpoint neutralization.

Decay time 3.0 sec. or less



F120R-E

Butterfly louver realizes high-speed neutralization.

Decay time 1.5 sec. or less



F120S-E

Low airflow model not disturbing the work environment.

Decay time 2.5 sec. or less



CF-300-E

Wide area neutralization. Easy cleaning of the discharge needles.

Decay time 1.5 sec. or less



CF-600-E

Wide area neutralization. Slim & 600mm wide space-saving model.

Decay time 1.5 sec. or less



L-90-E

Versatile neutralization by combination of the louvers, wide or straight.

Decay time 1.5 sec. or less

Why is VESSEL's fan type our customer's top choice?

1

High neutralization performance through efficient ion generation


The high frequency piezoelectric transformer generates large volumes of ions, and eliminates losses caused by recoupling ions.



2

Advanced control technology with steady ion balance

The capacity coupling type discharge needle ensures a stable ion balance, and prevents static destruction of the semiconductor.

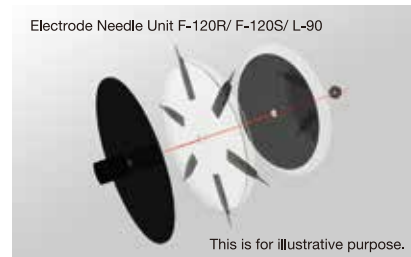

3

Improved maintainability by the louver type cover with the discharge needles integrated

Easy to detach the cover. Can clean the discharge needles in other area, not causing contamination in the work environment.



Ionizing Mini Fan with Stand

Exquisite wind for secure ion transfer without scattering dust.

F-6BF-E




Low Noise Fan

Code No. 621677

High Voltage Transformer	Ion balance	Decay time	Directive
Coiled, AC	within ± 10 V	8.0 sec. or less	CE

Input voltage 24VDC	Fan Speed 2 steps	LED illumination	AC adapter 100~240V included	Needle electrode unit replacement	ALARM FAN LOCKUP	ALARM H.V.
---------------------	-------------------	------------------	------------------------------	-----------------------------------	------------------	------------


- Compact and lightweight.
- Easy to detach the louver.
- Confirm operation status and needle tip contamination with built-in light.

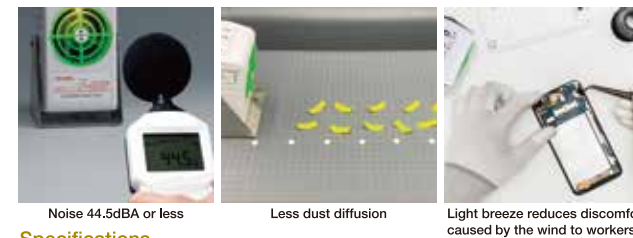

Specifications

Model No.	F-6BF-E
Ionizing method/Applied voltage	High frequency AC corona discharge / 3.5kVAC
Input voltage/Current consumption	24VDC $\pm$ 5% / 180mA (typ.)
Ion balance	within ± 10 V (150mm at front)
Decay time	HI: 8.0 sec. or less (300mm at front) / LO: 17.3 sec. or less (250mm at front)
Operating distance	150~300mm
Dimensions	H131 x W77 x D81mm (not including the stand)
Weight	360g (not including the stand)
Fan speed	HI : 0.36m / s / LO : 0.19m / s
Noise level	HI : 44.5dBA / LO : 40dBA
Ozone production	0.05ppm or less(50mm)
Operating temp./ humidity	5~40°C / 35~65% RH (no dew condensation or freezing)
Accessories	AC adapter AD24-ITF6-E, AC input cable 1.8m

Performance

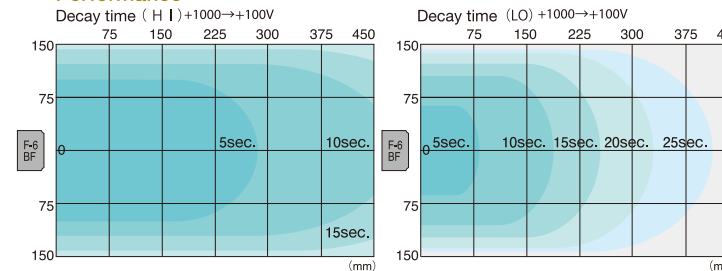

Accessories



AC Adapter
AD24-ITF6E
EDP No.806138

I / P : 100~240VAC 0.4A
O / P : 24VDC 0.75A

Ionizing Mini Fan with Clip

Clip type for attachment to a workbench or a desk support.

F-6RCL-E



Low Noise Fan

Code No.621663

Ionizing Mini Fan with Stand

Compact. Install anywhere for pinpoint neutralization.

F-6RST-E




Low Noise Fan

Code No.621662

High Voltage Transformer	Ion balance	Decay time	Directive
Coiled, AC	within ± 10 V	3.0 sec. or less	CE

Input voltage 24VDC	Fan Speed 2 steps	LED illumination	AC adapter 100~240V included	Needle electrode unit replacement	ALARM FAN LOCKUP	ALARM H.V.
---------------------	-------------------	------------------	------------------------------	-----------------------------------	------------------	------------

- Compact and lightweight.
- Easy to detach the louver.
- Confirm operation status and needle tip contamination with built-in light.

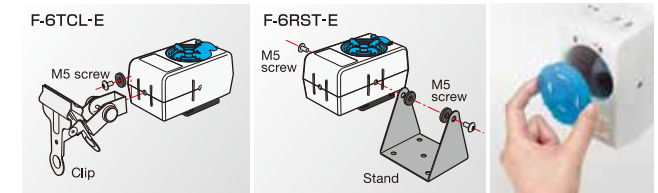


Can remove the clip when not needed. Can remove the stand when not needed. Easy to detach.

Common Specifications

Model No.	F-6RCL-E	F-6RST-E
Ionizing method/Applied voltage	High frequency AC corona discharge/ 3.5kVAC	
Input voltage/Current consumption	24VDC $\pm$ 5% / 210mA (typ.)	
Ion balance	within ± 10 V (150mm at front)	
Decay time	3.0 sec. or less (150mm at front)	
Operating distance	150~600mm	
Dimensions	H254 x W77 x D108mm (Clip incl.)	H142 x W90 x D81mm (Stand incl.)
Weight	524g	470g
Air volume	0.78m ³ /min(Max.)	
Noise level	HI 58.5dBA / LO 39.5dBA	
Ozone production	0.05ppm or less(50mm)	
Operating temp./ humidity	5~40°C / 35~65% RH (no dew condensation or freezing)	
Accessories	AC adapter AD24-ITF6-E, AC input cable 1.8m	

Performance

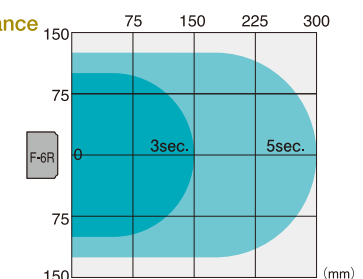

Accessories




AC Adapter
AD24-ITF6E
EDP No.806138

I / P : 100~240VAC 0.4A
O / P : 24VDC 0.75A

Ionizing Fan

Butterfly louver,
for neutralization in a wide area

F120R-E

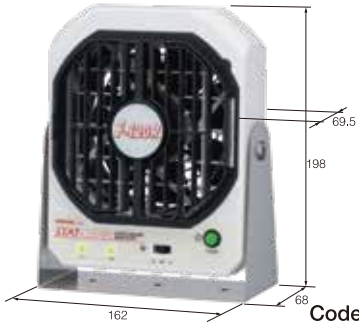

Code No. 621651

High VoltageTransformer	Ion balance	Decay time	Directive
Piezoelectric, AC	within ±10 V	1.5 sec. or less	CE

Input voltage 24VDC	Fan Speed HI/MD/LO	AC adapter 100~240V included	Electrode needle unit replacement	ALARM FAN LOCKUP	ALARM H.V.	External output terminal
------------------------	-----------------------	------------------------------------	--	---------------------	---------------	--------------------------------


- ▶ Butterfly Louver. Press outer side to disperse air. Press around the center to let air go straight for quick neutralization.
- ▶ Apparent indication of operating status: 2-color LED illuminates red when errors or malfunction occurs.
- ▶ Easy maintenance.The needle electrode is set into the front cover.



Specifications

Model No.	F120R-E
Ionizing method/ Applied voltage	High-frequency AC corona discharge/ 10kVAC (p-p) (H/V power unit)
Input voltage/ Current consumption	24VDC ±5%/700mA (max.)
Ion balance	within ±10V (at factory shipment, max. fan speed, straight, at 300mm)
Decay time	1.5 sec. or less (at factory shipment, max. fan speed, straight, at 300mm)
Operating distance	150 ~ 900 mm
Dimensions	H198×H162×D70mm(stand included)
Weight	0.9kg
Air volume	3.66m³/min (Max.)
Noise level	HI : 61dBA / LO : 55dBA
Ozone production	0.05ppm or less (50mm)
Operating temp./ humidity	5~40°C/ 35~65% RH (no dew condensation or freezing)
Accessories	AC adapter AD24-ITE, AC cable(1.8m)

Performance

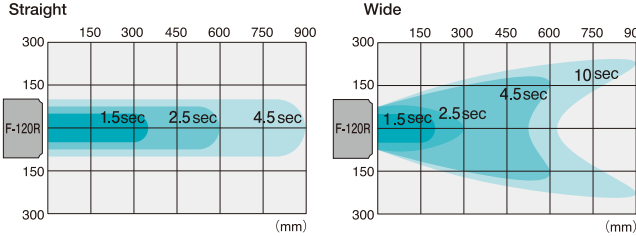

Accessories



AC Adapter
AD24-ITE
Code No.806135
I / P : 100~240VAC 0.4A
O/P : 24VDC 0.75A

Ionizing Fan

Silent fan model
with mild airflow

F120S-E



Code No. 621646

High VoltageTransformer	Ion balance	Decay time	Directive
Piezoelectric, AC	within ±10 V	2.5 sec. or less	CE

Input voltage 24VDC	Fan Speed HI/MD/LO	AC adapter 100~240V included	Electrode needle unit replacement	ALARM FAN LOCKUP	ALARM H.V.	External output terminal
------------------------	-----------------------	------------------------------------	--	---------------------	---------------	--------------------------------


- ▶ Butterfly Louver. Press outer side to disperse air. Press around the center to let air go straight for quick neutralization.
- ▶ Apparent indication of operating status: 2-color LED illuminates red when errors or malfunction occurs.
- ▶ Easy maintenance.The needle electrode is set into the front cover.



Specifications

Model No.	F120S-E
Ionizing method/ Applied voltage	High-frequency AC corona discharge 10kVAC (p-p) (H/V power unit)
Input voltage/ Current consumption	24VDC ±5%/500mA (max.)
Ion balance	within ±10V (at factory shipment, max. fan speed, straight, at 300mm)
Decay time	2.5 sec. or less (max. fan speed, straight, no filter, at 300mm)
Operating distance	150 ~ 900 mm
Dimensions	H198×H162×D70mm(stand included)
Weight	0.9kg
Air volume	2.21 m³/min (Max.)
Noise level	HI : 51dBA / LO : 44dBA
Ozone production	0.05ppm or less (50mm)
Operating temp./ humidity	5~40°C/ 35~65% RH (no dew condensation or freezing)
Accessories	AC adapter AD24-ITE, AC cable(1.8m)

Performance

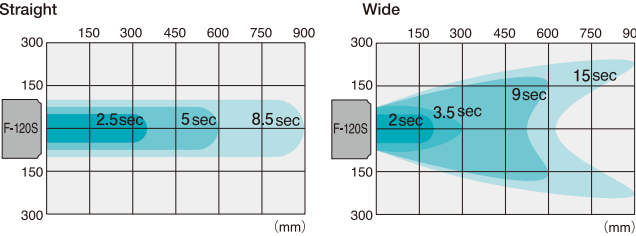

Accessories




AC Adapter
AD24-ITE
Code No.806135
I / P : 100~240VAC 0.4A
O/P : 24VDC 0.75A

Ionizing Cross-Flow Fan

Wide area neutralization
Evenly, straight, and far

CF-300-E

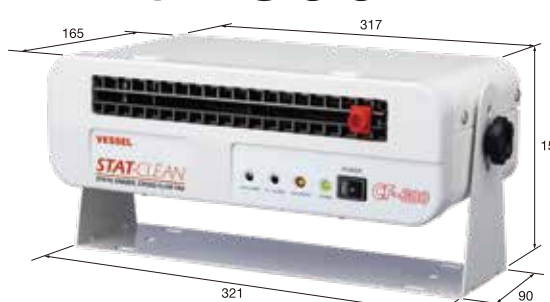


Code No. 621657

High VoltageTransformer	Ion balance	Decay time	Directive
Coiled, AC	within ±10 V	1.5 sec. or less	CE

Input voltage 24VDC	No-step airflow volume changeover	AC adapter 100~240V included	ALARM FAN LOCKUP	ALARM H.V.	External output terminal
------------------------	--	------------------------------------	---------------------	---------------	--------------------------------


- ▶ Superior ionizing performance with a combination of a cross-flow fan for neutralization in a wide area and of a straight front cover.
- ▶ Easy maintenance of needle electrode with a brush that can be slid by a finger.

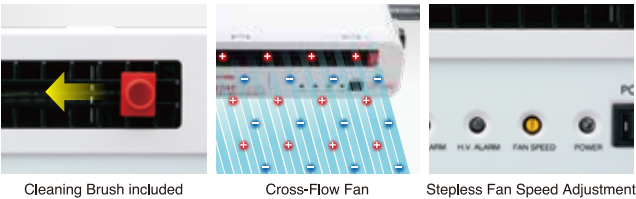

Specifications

Model No.	CF-300-E
Ionizing method/ Applied voltage	AC(20kHz) corona discharge / 9.2kVAC(p-p)
Input voltage/ Current consumption	24 VDC ripple (p-p) within ±10% / 500mA(max)
Ion balance	within ±10 V (at factory shipment, at 300mm)
Decay time	1.5 sec. or less (300mm at front, max. fan speed)
Operating distance	150 ~ 900 mm
Dimensions	H157×W348×D165 mm
Weight	2.9 kg
Air volume	2.5m³/min (Max.)
Noise level	HI : 48dBA (at 1m)
Ozone production	0.05ppm or less (50mm)
Operating temp./ humidity	5~40°C/ 35~65% RH (no dew condensation or freezing)
Accessories	AC adapter AD24-ITE , AC cable(1.8m) Cleaning brush 1pc.

Performance

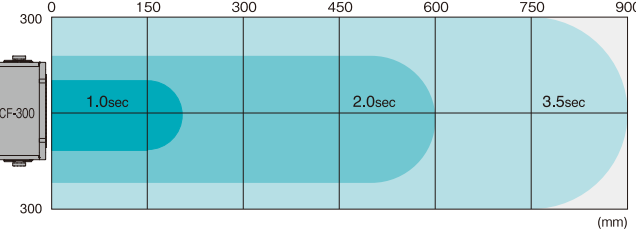

Accessories




AC Adapter
AD24-ITE
Code No.806135
I / P : 100~240VAC 0.4A
O/P : 24VDC 0.75A

Options and replacement parts
⇒P.38

Ionizing Cross-Flow Fan

Slim and wide ionizer
Very wide area neutralization

CF-600-E

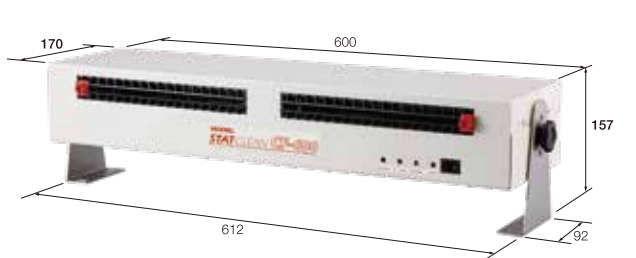

Code No. 621674

High VoltageTransformer	Ion balance	Decay time
Coiled, AC	within ±10 V	1.5 sec. or less

Input voltage 24VDC	No-step airflow volume changeover	AC adapter 100~240V included	ALARM FAN LOCKUP	ALARM H.V.	External output terminal
------------------------	--	------------------------------------	---------------------	---------------	--------------------------------


- ▶ Space-saving ionizer, slim and 600mm wide
- ▶ Superior ionizing performance with a combination of a cross-flow fan for neutralization in a wide area and of a straight front cover.
- ▶ Sliding cleaning brush is equipped



Specifications

Model No.	CF-600-E
Ionizing method/ Applied voltage	AC(20kHz) corona discharge / 9.2kVAC(p-p)
Input voltage/ Current consumption	24 VDC ripple (p-p) within ±10% / 900mA(max)
Ion balance	within ±10 V (at factory shipment, at 300mm)
Decay time	1.5 sec. or less (300mm at front, max. airflow)
Operating distance	Approximately 150 ~ 900 mm
Dimensions	H157×W640×D170 mm
Weight	4.6 kg
Air volume	2.5m³(Max.)
Noise level	HI : 51.7dBA (at 1m)
Ozone production	0.05 ppm or less
Operating temp./ humidity	5~40°C/ 35~65% RH (no dew condensation or freezing)
Accessories	AC adapter, AC cable(1.8m), Cleaning brush 2pcs. (already mounted), Rubber washer 2pcs., Stand 2 pcs., Angle adjustmet knob 2pcs.

Performance

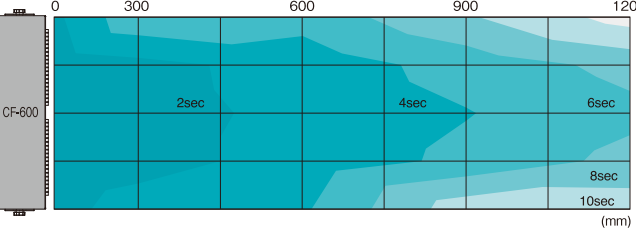

Accessories




AC Adapter
AD24-ITE
Code No.806081
I / P : 100~240VAC 1.2A
O/P : 24VDC 1.9A

Options and replacement parts
⇒P.38

Overhead Ionizing Triple Fan

Versatile neutralization by combination of the louvers, wide or straight.

L-90-E

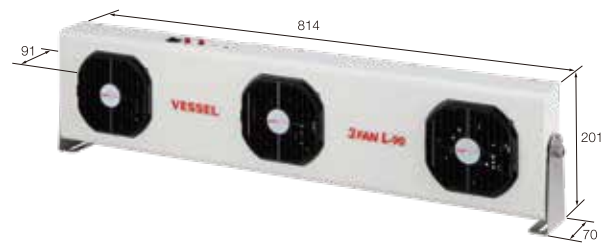

Code No. 621628

High Voltage Transformer	Ion balance	Decay time
Piezoelectric, AC	within ±10V	1.5sec.or less

Input voltage 24VDC

No-step fan speed changeover

AC adapter 100~240V included

Needle electrode unit replacement

ALARM FAN LOCKUP


ALARM H.V.

External output terminal


► Butterfly louver is equipped on each fan.
Press outer side to disperse air and around the center to let air go straight for quick neutralization.

► Capacitive-coupled needles ensure stable and long-lasting ionizing performance.

► Easy maintenance: needle electrode is integrated to the front cover.

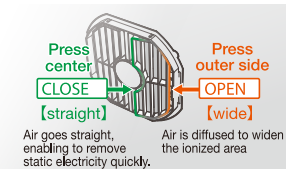

Butterfly Louver

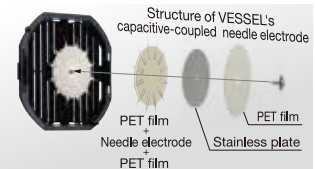


Capacitive-coupled Needle Electrode

Specifications

Model No.	L-90-E
Ionizing method/ Applied voltage	High-frequency AC corona discharge/ 9.5kVAC(p-p) (H/V power unit)
Input voltage/ Current consumption	24 VDC ±5% /3.0A(max)
Ion balance	within ±10 V (at factory shipment, at 300mm)
Decay time	1.5 sec. or less (at 150mm)
Operating distance	150 ~ 900 mm
Dimensions	H182xW814xD91 mm (with stand:H201xW880xD91 mm)
Weight	5.7kg
Air volume	7.1m³/min (a total of 3 fans) (max. fan speed)
Noise level	HI : 75.4dBA, LO : 71.9dBA (at 1m)
Ozone production	0.05 ppm or less (at 50mm)
Operating temp./ humidity	5~40°C/ 35~65% RH (no dew condensation or freezing)
Accessories	AC adapter, AD24-IT37E, AC cable(1.8m)

Performance

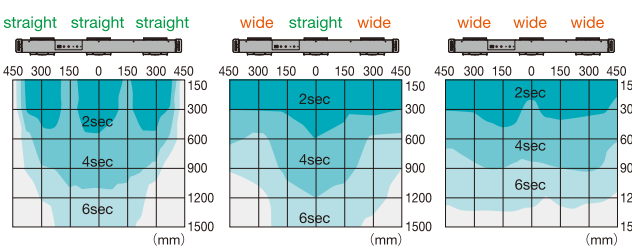

Accessories



AC Adapter
AD24-IT37E
Code No.806139

I/P : 100~240VAC 1.5A
O/P : 24VDC 3.75A

VESSEL ionizers for a variety of applications.



Inspection process



Dust prevention on molded parts



Wide conveyor



Cell production table



Bottle cleaning



Vibratory bowl feeder (joint nozzle + shower tube)



Robots for molded parts



Removal of fluid spills in filling lines



Using with flexible shaft



Moval in a bottle



Check the small points with LED Beam Light.



Static electricity removal of resin parts



Over a belt conveyor



Injection molded plastic objects



Packing process of food containers

09

10

Nozzle Type



N-1

Ultra-compact slim ionizing nozzle

Decay time 1.0 sec. or less



N-3

Interchangeable nozzles for a versatile application


Decay time 1.0 sec. or less



HPN-1 →P33

Good for highly charged products. Suitable for an automated production line.

Decay time 0.5 sec. or less

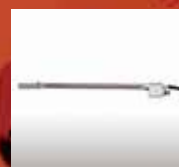

HPF-1 →P34

Good for highly charged products. Flexible nozzle angle adjustment.

Decay time 1.0 sec. or less

Why is VESSEL's nozzle type our customer's top choice?

1

LED indicators clearly indicate the operating status

The bright LED lamps show the operating state even when installing in dark systems.



2

Diverse lineup of optional nozzles support various applications

Use the Silent Nozzle, reducing the exhausting noise.



3

Daisy-chain wiring. Safe because the high voltage cables stay inside the product.

Power can be supplied to multiple units by the daisy-chain wiring. 24 VDC wiring enhances safe connection.



Super Slim Ionizing Nozzle

Super Compact Slim Body.

N-1



Code No. 621639

High Voltage Transformer	Ion balance	Decay time
Piezoelectric, AC	within ± 10 V	1.0 sec. or less

Input voltage 24VDC	Air pressure max.0.6MPa	AC Adapter (Option)	Screw-type needle electrode	"ON" lamp	ALARM H.V.	External output terminal
------------------------	----------------------------	------------------------	-----------------------------------	-----------	---------------	--------------------------------

- ▶ Super slim and compact design enabling to be installed at any place for any direction. 27.5mmx28mm.
- ▶ Equipped with 6-pole terminals enabling high voltage alarm signal output as well as 24VDC daisy-chain wiring.




Alarm outputs and daisy chains possible.

Specifications

Model No.	N-1
Ionizing method/ Applied voltage	High frequency AC corona discharge /5kVAC(p-p)
Input voltage/ Current consumption	24VDC $\pm 5\%$, ripple(p-p) 10% or less/ 100mA
Ion balance	within ± 10 V (w/standard nozzle, 0.3MPa, at 150mm)
Decay time	1.0 sec or less (0.3MPa, at 150mm)
Operating distance	50 ~ 600 mm
Dimensions	L109.6xW27.5xH28 mm
Weight	62g (with standard nozzle mounted)
Air supply house diameter	Tube fitting O/D6mm
Operating fluid	Clean dry air (0.1 ~ 0.6MPa), N ₂ (0.1 ~ 0.6MPa)
Air consumption	160L/min (with standard nozzle mounted, 0.2MPa)
Noise	94.2dBA (0.3MPa)
Ozone production	0.05ppm or less (50mm)
Operating temp./ humidity	5~40°C/35~65% RH(no dew condensation or freezing)
Accessories	Standard nozzle (already mounted)

Performance

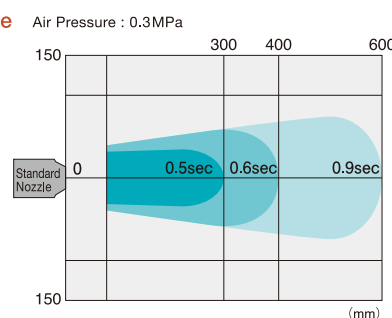


Options and replacement parts

⇒P.37

Pinpoint Ionizing Nozzle

Featuring an LED indicator that communicates the device's operating status at a glance

N-3

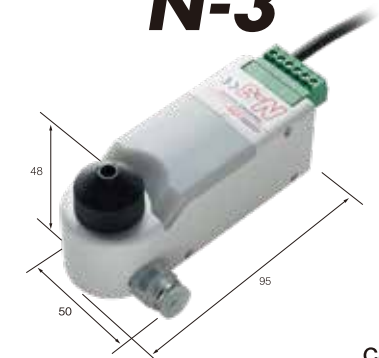

Code No. 621654

High Voltage Transformer	Ion balance	Decay time	Directive
Coiled, AC	within ± 10 V	1.0 sec. or less	CE

Input voltage 24VDC	Air pressure max.0.6MPa	AC Adapter (Option)	Screw-type needle electrode	"ON" lamp	ALARM H.V.	External output terminal
------------------------	----------------------------	------------------------	-----------------------------------	-----------	---------------	--------------------------------

- ▶ Easy to wire with connector terminals.
- ▶ Diverse nozzles support various applications.



Standard Nozzle
(included as accessory)




Alarm outputs
and daisy chains.

Specifications

Model No.	N-3
Ionizing method/ Applied voltage	High frequency AC corona discharge / 5.6kVAC(p-p)
Input voltage/ Current consumption	24VDC $\pm 5\%$ / 90mA(max.)
Ion balance	within ± 10 V (w/standard nozzle, 0.3MPa, at 150mm)
Decay time	1.0 sec or less (0.3MPa, at 150mm)
Operating distance	50 ~ 600 mm
Dimensions	L95xW50xH48 mm
Weight	104g
Air supply house diameter	Tube fitting O/D6mm
Operating fluid	Clean dry air (0.1 ~ 0.6MPa), N ₂ (0.1 ~ 0.6MPa)
Air consumption	210L/min (with standard nozzle mounted, 0.3MPa)
Noise	99.4dBA (0.3MPa)
Ozone production	0.05ppm or less (50mm)
Operating temp./ humidity	5~40°C/35~65% RH(no dew condensation or freezing)
Accessories	Standard nozzle (already mounted), Power supply harness

Performance

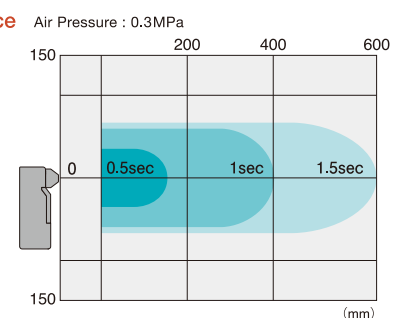

Options and replacement parts

⇒P.37

Gun Type



G7R-E

Compact and lightweight
High discharge air blow ionizer

Decay time 1.0 sec. or less



G-2-E

Practicable handy ionizer
with flexible cable installation

Decay time 0.8 sec. or less



G-9

Self Power Generating
Ionizing Gun

Decay time 1.0 sec. or less



HPG-1 →P35

Good for Highly Charged Products
Easy handling large trigger model

Decay time 0.5 sec. or less

Why is VESSEL's gun type our customer's top choice?

1

The bright LED lamp
makes dust visible

Use the LED lamp to check dust that has
adhered on the workpiece.



2

Piezoelectric transformer enhances
safety with no need to expose
high-voltage cables


The high-voltage cable is not exposed, so
there's no need to worry about current leaks or
electric shock caused by wire breakage.



3

Ergonomically designed grip is
easy to hold and adjusted to
the optimum angle

The nozzle direction faces the optimum
direction when the grip is held, allowing work to
be started right away.

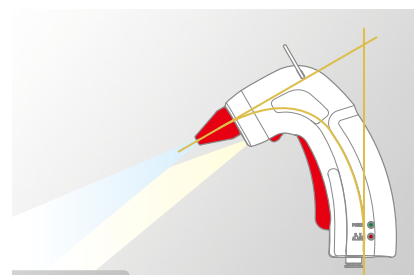

Ionizing Gun

Our most popular ionizing air gun is compact,
lightweight and user-friendly

G7R-E



Code No. 621621

High Voltage Transformer	Ion balance	Decay time	Directive
Piezoelectric, AC	within ± 10 V	1.0 sec. or less	CE

Input voltage 24VDC	Air Pressure max 0.6MPa	LED illumination	AC adapter 100~240V included	Screw-type needle electrode	"ON" lamp	ALARM H.V.
------------------------	----------------------------	---------------------	------------------------------------	-----------------------------------	-----------	---------------

- ▶ Bright white LED lamp makes dust visible.
- ▶ Ideal for neutralization and dust elimination from precision parts,
for example, at hand in a cell production.
- ▶ Diverse options support various applications.



Attach a brush to blow out dust




Operating and malfunction alarm LEDs
on both sides of the grip

Specifications


Model No.	G7R-E
Ionizing method/ Applied voltage	High frequency AC corona discharge / 6.0kVAC(p-p)
Input voltage/ Current consumption	24VDC $\pm 5\%$ / 74mA (typ. LED lamp: ON)
Ion balance	within ± 10 V (at factory shipment, input air pressure 0.3MPa, at 150mm)
Decay time	1.0 sec or less (0.3MPa, at 150mm)
Operating distance	50 ~ 300 mm (Installation: indoor, non-hazardous area)
Dimensions	H150xW36xD102mm
Weight	198g
Air supply hose diameter	Tube fitting O/D6mm
Operating fluid	Clean dry air (0.1 ~ 0.6MPa)
Air consumption	180L/min (0.3MPa)
Noise	92dBA (0.3MPa)
Ozone production	0.05ppm or less (50mm)
Operating temp./ humidity	5~40°C/35~65% RH (no dew condensation or freezing)
Accessories	AC adapter AD24-ITC-E, AC cable (1.8m), Standard Nozzle (Already mounted)

Performance


Air Pressure : 0.3MPa
(with Standard nozzle mounted)

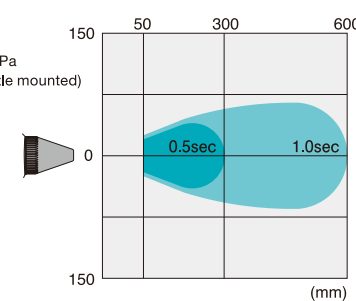


Dust removal from plastic trays

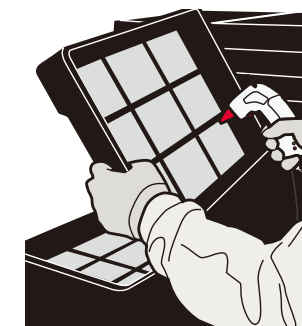


Dust removal from substrates

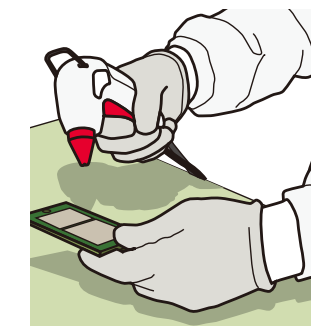

Dust and static-electricity removal
from mobile phone parts

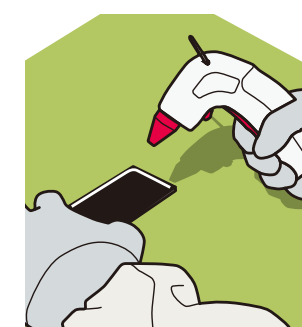

Dust and static-electricity removal
from bumpers

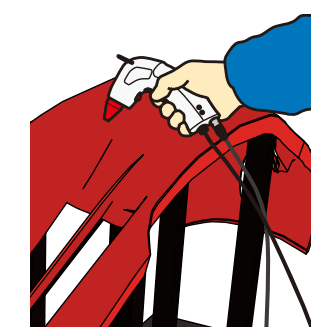

Accessories



AC Adapter
AD24-ITC-E
Code No. 806067
I / P : 100~240VAC 0.4A
O / P : 24VDC 0.75A

Options and replacement parts
⇒P.37

Ionizing Gun


Improved workability with the cables in the grooves on the grip

G-2-E



Code No. 621659

Use by hanging above cell production benches

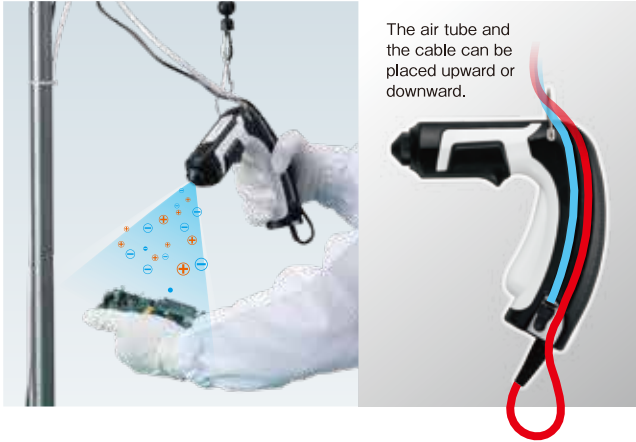

The air tube and the cable can be placed upward or downward.

Removal of static electricity from plastic trays



Accessories



AC Adapter
AD24-ITCS-E (Length 1.5m)
Code No. 806084
I/P : 100~240VAC 0.4A
O/P : 24VDC 0.75A

High Voltage Transformer	Ion balance	Decay time	Directive
Piezoelectric, AC	within ± 10 V	0.8 sec. or less	CE

Input voltage 24VDC	Air Pressure max 0.6MPa	AC adapter 100-240V included	Screw-type needle electrode	"ON" lamp	ALARM H.V.
------------------------	----------------------------	------------------------------------	-----------------------------------	-----------	---------------

- ▶ Can change the piping and cable direction according to the application. Does not get in the way of work on the cell production bench.
- ▶ Remove the cap, and it is easy to clean the needle.



Powerful blow of ionized air through the dedicated nozzle.


Can fit the cable in the groove on the grip lateral side.

Specifications

Model No.	G-2-E
Ionizing method/ Applied voltage	High-frequency AC corona discharge / 4.5kVAC(p-p)
Input voltage/ Current consumption	24VDC $\pm 5\%$ / 100mA(typ.)
Ion balance	within ± 10 V
Decay time	1.0 sec or less (0.3MPa, at 150mm)
Operating distance	50 ~ 300 mm (Installation: indoor, non-hazardous area)
Dimensions	H157xW148xD44mm
Weight	260g
Air supply house diameter	Tube fitting O/D6mm
Operating fluid	Clean dry air (0.1 ~ 0.6MPa)
Air consumption	153L/min (0.3MPa)
Noise	94dBA (0.3MPa)
Ozone production	0.05ppm or less (50mm)
Operating temp./ humidity	5~40℃/35~65% RH(no dew condensation or freezing)
Accessories	AC adapter AD24-ITCS-E, AC cable(1.8m), Standard Nozzle (already mounted)

Performance

Air Pressure:0.3MPa

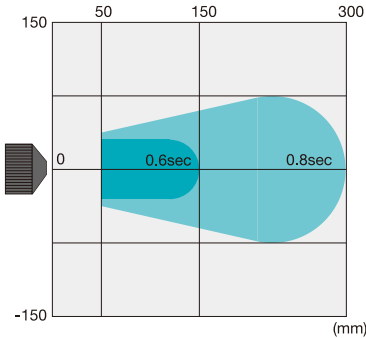

Pneu-Power Ion Gun

Innovative self-power generating ionizing gun.

No need for electric wiring

G-9



Code No. 621670

High Voltage Transformer	Ion balance	Decay time	Directive
Coiled, AC	within ± 30 V	1 sec. or less	CE

Air Pressure max 0.6MPa	Screw-type needle electrode	Adjustment lamp	Regulator
----------------------------	-----------------------------------	--------------------	-----------




- ▶ The motor is rotated by an air turbine to generate power for ion production.
- ▶ No AC adapter or high-voltage wiring is required; all that is needed is to connect an air hose, and it is ready to use.
- ▶ High Flow Nozzle is included in the package. For blowing work that requires more airflow or for work over a wide area.

Specifications

Model No.	G-9
Ionizing method/Applied voltage	High-frequency AC corona discharge / 8kVAC(p-p)
Ion balance	within ± 30 V
Decay Time	1sec. or less ± 1000 V $\rightarrow \pm 100$ V (0.5MPa, 200L/min, at 150mm)
Operating distance	50~300mm(distance between the charged product and the tip of the G-9)
Air connection	$\Phi 8$ mm with one-touch joint
Operating fluid	Clean dry air / 0.4 ~ 0.6MPa (rated 0.5MPa)
Dimensions	W 232.5mm $\times$ H 191mm $\times$ W 50.6mm
Weight	Approx. 470g
Air consumption	200L/min (0.5MPa)
Noise	Approx. 74.6dBA (Standard nozzle, 0.5MPa, 210L/min, at 1m) Approx. 87.3dBA (G-9HFN, 0.5MPa, 210L/min, at 1m)
Operating temp./humidity	0~45℃/10~90% RH (no dew condensation or freezing)
Accessories	High flow nozzle, Instruction manual

Performance

Air Pressure:0.5MPa

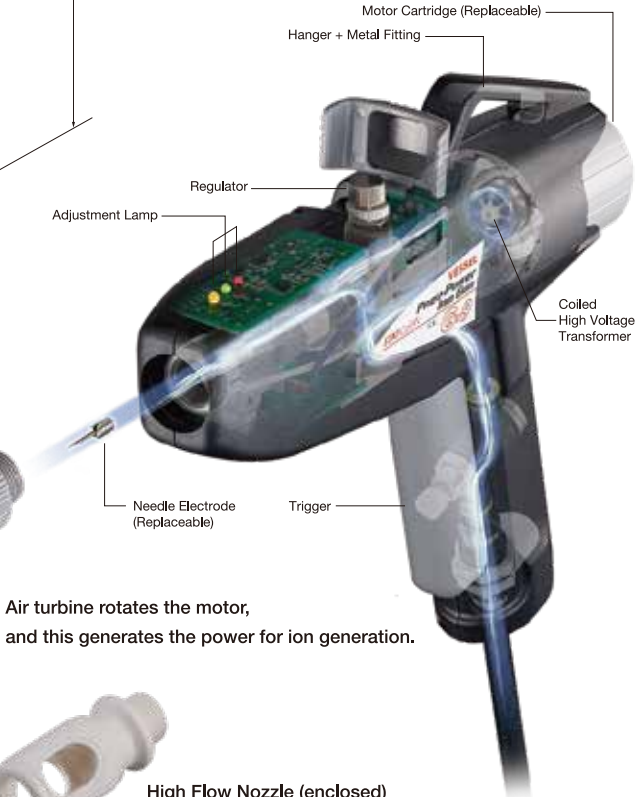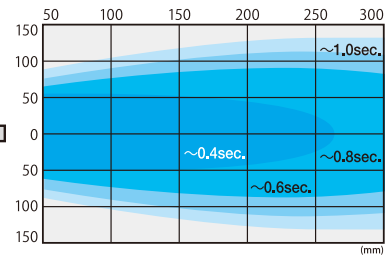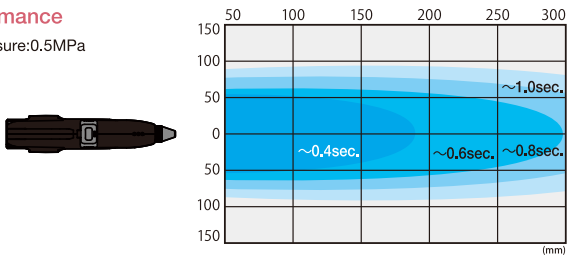

Air turbine rotates the motor, and this generates the power for ion generation.



High Flow Nozzle (enclosed)
By using this new nozzle, blowing performance is dramatically improved!



Options



Silent Nozzle
G-9WN
Code No. 806151



Straight Silent Nozzle
BB-ZSN
Code No. 821708



Plug with Urethane Tube
G-9UTP
Code No. 806148
Hose: $\Phi 8 \times \Phi 5$ mm
Length : 3m



High Flow Nozzle
G-9HFN
Code No. 806154

Why is VESSEL's bar type our customer's top choice?

Bar Type

C-series

Compact and clean design
Super-high speed ionizer

Ion balance within $\pm 30V$
(at 1000mm)

SL-series

For highly charged or
fast moving products

HPB-series →P36

Good for Highly Charged Products
Optimum for installation in a cramped space


Decay time 2.0 sec. or less

1

High Speed Static Electricity Removal


AC pulse method

Generating alternately positive ions and negative ions from each electrode. Since ions are generated at the maximum width of each positive and negative electrode cycle, the ion volume is high and static electricity can be removed quickly.

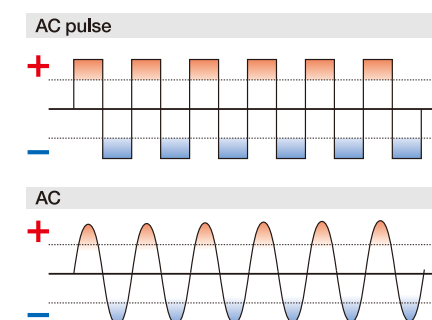


Auto Balance Mode

The C series are equipped with a mode to optimally adjust the ion balance automatically according to the polarity of the charged matter. (Target distance: 50 to 100 mm)

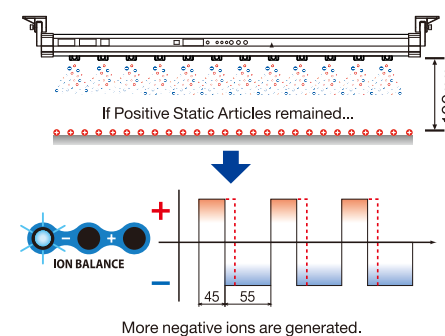

Air purge function

With air purged toward the needle electrode tip. This not only prevents contamination at the tip of the electrode needle, but also carries the generated ions quickly to the charged object and removes static electricity.

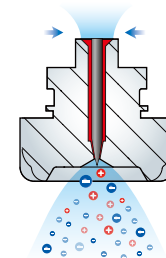

2

Usability

Easy maintenance design

One-touch needle replacement. A socket type needle can be easily replaced.



Clean design


Needle cleaning time notified

The cleaning interval of the needles can be set by a unit of day from 1 to 60 days. When the time elapses, the needle cleaning alarm lamp lights up.
※C-90 and longer sizes




Frequency

Change the frequency according to the distance to the object to be neutralized, for elimination of static electricity.

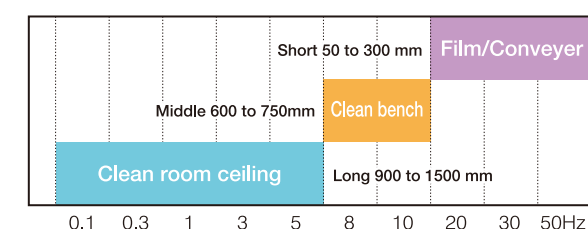

Angle adjustment

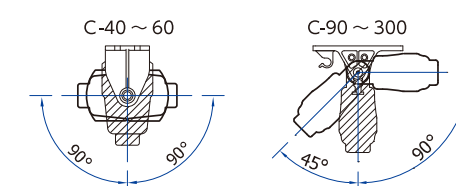


3

Line-up at a glance

Sizes to match various working environments

Ionizing bars are available in a variety of sizes for assembly into small electronic part manufacturing systems to neutralization of large workpieces such as film and liquid crystal glass.

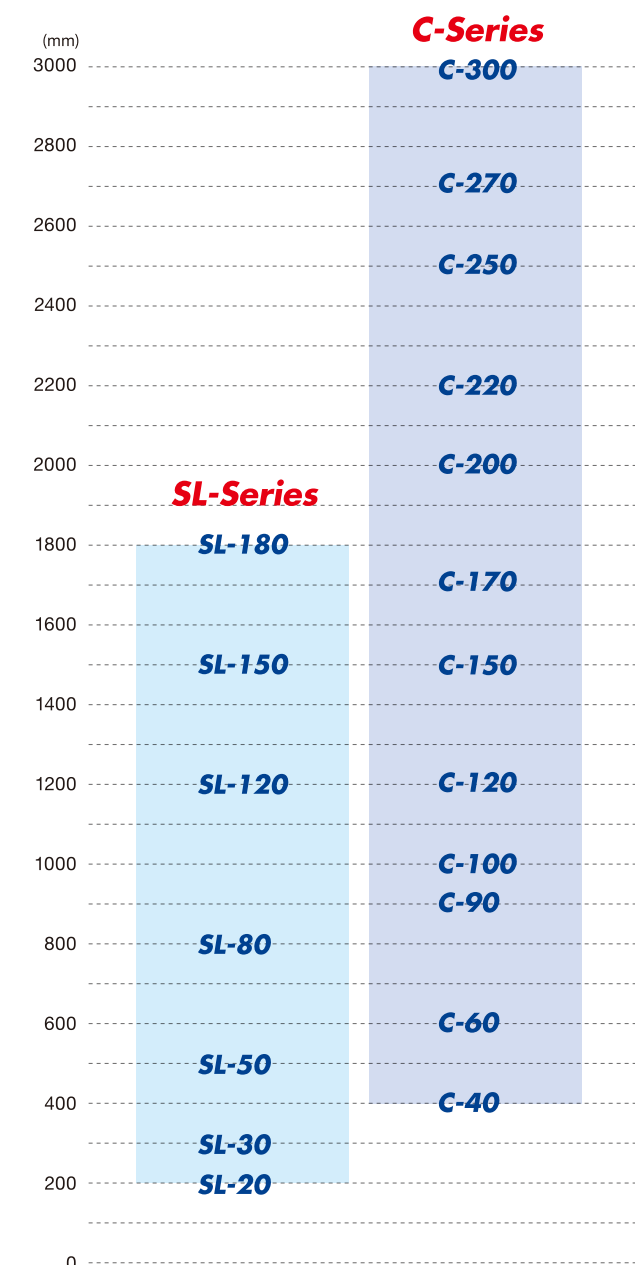

AC Pulse Ionizing Clean Bar

Clean & Compact.
Newly designed high-precision and high-speed ionizer applying a new technology

C-series



C-40	Code No.621857	C-170	Code No.621855
C-60	Code No.621858	C-200	Code No.621856
C-90	Code No.621851	C-220	Code No.621859
C-100	Code No.621852	C-250	Code No.621860
C-120	Code No.621853	C-270	Code No.621861
C-150	Code No.621854	C-300	Code No.621862


Common Specifications

Model No.	C-40~C-300
Ionizing method/Applied voltage	Pulse AC Corona discharge / 8~12.5kVAC (p-p)
Frequency	0.1~50Hz(C-40/60: 10 steps, C-90 or longer types: 13 steps)
Pulse ratio	Positive side 40~70%, adjustable in 0.1% increment
Input voltage(Current consumption)	24VDC±5% (C-40/60: max.7.8W, C-90 or longer types: max.14.4W)
Ion balance	within ±30V (at 1000mm)
Decay time	See below
Operating distance	50~2000mm
HxWxDmm	See the table on the right
Weight	See the table on the right
Air joint	PT1/8 (I/D 6mm or larger recommended)
Operating fluid	Clean dry air or N2 (0.3MPa or less) (0.2MPa or less for intermittent supply)
Ozone production	0.05ppm or less (50mm)
Operating temp./humidity	0~50℃ / 35~85% RH (no dew condensation or freezing)
Accessories	Remote controller (Except C-40/60), Power cable 10m, Signal cable 10m (C-40/60 only), End bracket (Already mounted), Middle bracket (Only some models. See the right page.)


*Silicon discharge needles also available. For more detail please contact us.

High Voltage Transformer	Ion balance	Directive
Pulse AC	within ±30V (at 1000mm)	CE
Input voltage 24VDC	Air Pressure max 0.3MPa	LCD Display
	Needle electrode unit replaceable	Adjustable Ion Balance
	Needle Cleaning Timer (1 to 60 days)※	ALARM H.V.
		External output LAN Terminal

- ▶ Ultra high speed discharge ports of ionized air are newly designed.
- ▶ Auto Balance Mode (Target distance: 50~100mm) ※ Except C-40, C-60
- ▶ Terminals are grouped on one side, enabling a daisy-chain connection.

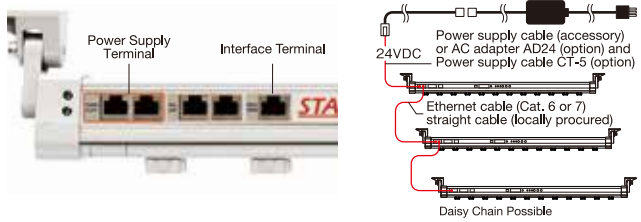

Performance Measurement conditions •Product : C-150 •Voltage : 10.5kV(P-06 N-06) •Air pressure : 0.3MPa
•Decay time : ±1000V→±100V

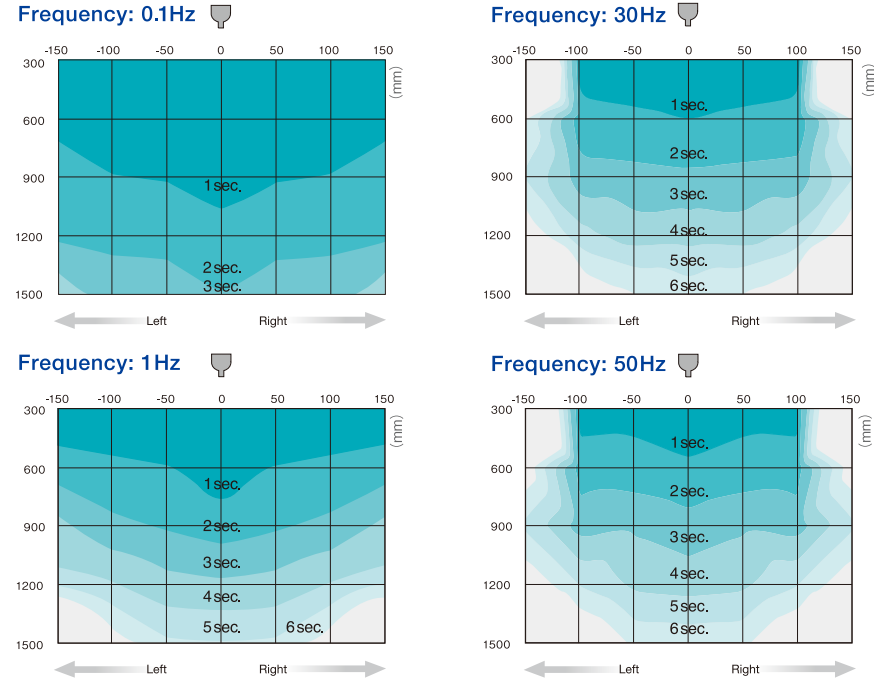

Options

Adapter specification


AC Adapter
AD24-IT
Code No. 806051
AD24-ITE
Code No. 806135
I / P : 100~240VAC 0.4A
O/P : 24VDC 0.75A
Operation : One bar

AC Adapter
AD24-IT19
Code No. 806081
AD24-IT19E
Code No. 806137
I / P : 100~240VAC 1.2A
O/P : 24VDC 1.9A
Operation : Up to 3 bars
(Please consult us for more detail)


Power Supply Cable (5m)
For AC adapter
CT-5
Code No. 621709
※When using AC adapter, Power Supply Cable (CT-5) is necessary.

Remote Control
RMC-01
Code No. 806104

C-40

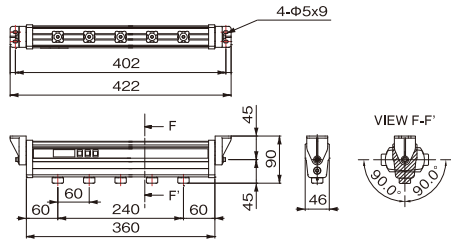


C-60

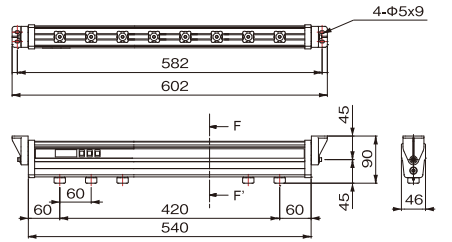


(Unit:mm)

C-90

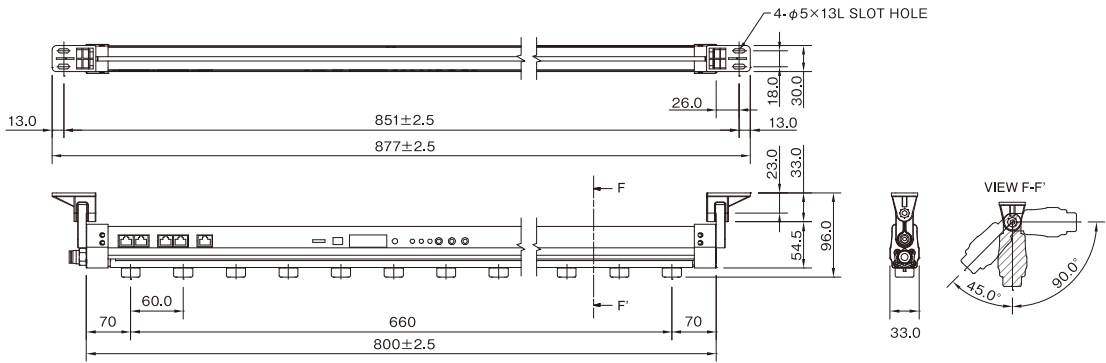

C-100, 120, 150, 170, 200, 220, 250, 270, 300

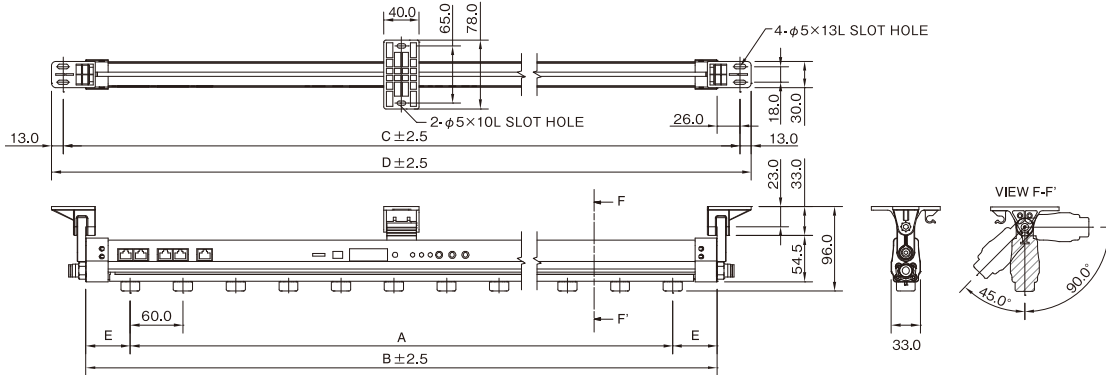

Dimension / Needle Electrode / Middle Bracket

Model.No	A (mm)	B (mm)	C (mm)	D (mm)	E (mm)	Needle Electrode	Middle Bracket	Weight (kg)
C-40	240	360	402	422	60	5 pcs.	—	0.78
C-60	420	540	582	602	60	8 pcs.	—	1.08
C-90	660	800	851	877	70	12 pcs.	—	0.9
C-100	900	1001	1052	1078	50.5	16 pcs.	1 pc.	1.0
C-120	1140	1241	1292	1318	50.5	20 pcs.	1 pc.	1.2
C-150	1380	1481	1532	1558	50.5	24 pcs.	1 pc.	1.4
C-170	1620	1721	1772	1798	50.5	28 pcs.	2 pcs.	1.6
C-200	1860	1961	2012	2038	50.5	32 pcs.	2 pcs.	1.8
C-220	2100	2201	2252	2278	50.5	36 pcs.	2 pcs.	2.3
C-250	2340	2441	2492	2518	50.5	40 pcs.	3 pcs.	2.6
C-270	2580	2681	2732	2758	50.5	44 pcs.	3 pcs.	2.8
C-300	2820	2921	2972	2998	50.5	48 pcs.	3 pcs.	3.1

Pulse Ratio

The ion balance can be adjusted by changing the pulse ratio.

Voltage Level

The applied voltage can be changed (common). The one for the positive side and the negative side can be changed respectively (except C-40/60). The amount of ions varies by different output (10 steps: 8.0~12.5kVP-p).

Voltage level	1	2	3	4	5	6	7	8	9	10
Positive voltage (kV)	4	4.25	4.5	4.75	5	5.25	5.5	5.75	6	6.25
Negative voltage (kV)	4	4.25	4.5	4.75	5	5.25	5.5	5.75	6	6.25
kV p-p	8	8.5	9	9.5	10	10.5	11	11.5	12	12.5

Ion Parts Cleaner



IPC-A4

Ideal A4 size for cell workbenches



IPC-A3

Ideal A3 size for cell workbenches



IPC-250CR

New concept of neutralization



IPC-V4

Foot-installed type
Static eliminator / Dust collector

Why is VESSEL's ion parts cleaner our customer's top choice?

1

Neutralization and dust elimination inside hoods


Dust adhered with static electricity is neutralized inside the ionized hood and eliminated with automatic powerful air blow.



2

Collect dust with self-adhesive urethane gel

The adhesive surface of the urethane gel mat enables to catch dust blown away by the ionized air inside the booth. The washable gel sheet can be used repeatedly (IPC-A4/IPC-A3/IPC-V4)

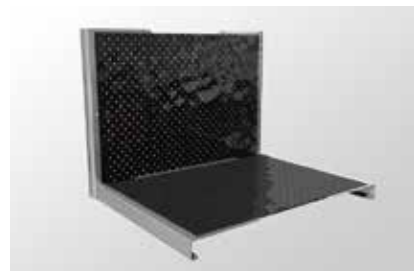


Fan Type Nozzle Type Gun Type Bar Type **Ion Parts Cleaner** EPA Products Clean Walker Options

Ion Parts Cleaner

A4 size is ideal for capturing dust with adhesive urethane gel at cell workbench


IPC-A4

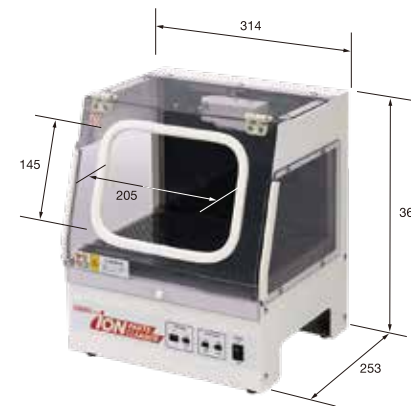

Code No.621610

Sensor	Air blow	Off timer
Diffused reflection type	Continuous/ Pulse	1 to 30 sec. (5 steps)
Applied voltage 24VDC	Air Pressure max 0.6MPa	Ionizer N-3x1pc
	AC adapter 100~240V included	Airflow adjustment
		Gel sheet + fan filter
		Integrated hood/dust collector

- ▶ Since a dust collector is not needed, the current consumption is greatly reduced.
- ▶ Built-in ionizing nozzle emits air for removal of dust and static electricity in either continuous or pulse mode.
- ▶ Urethane gel sheet can be washed for repeated use.

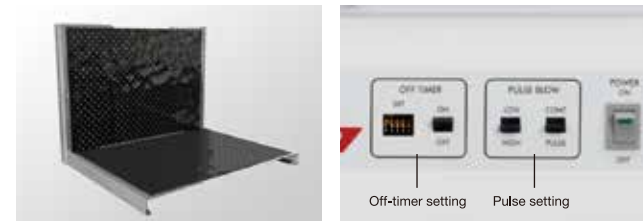

Self Adhesive GEL collects dust.

Specifications

Model No.	IPC-A4
Ionizing method/Applied voltage	High voltage AC corona discharge/ 5.6kVAC(p-p)
Input voltage	24VDC ±5%
Current consumption	700mA or less
Dust collection airflow	3.5 m³/min (Built-in fan)
Static pressure	105Pa (Built-in fan)
Dust collection filter	Self-adhesive polyurethane gel sheets and non-woven fabric filter
Dimensions	H361×W314×D253mm
Weight	6kg
Air supply house diameter	Tube fitting O/D8mm
Air consumption	147L/min(0.3MPa, Continuous mode)
Operating fluid	Clean dry air (0.1 ~ 0.6MPa)
Ozone production	0.05ppm or less(50mm)
Operating temp./ humidity	5~40°C / 35~65% RH (no dew condensation or freezing)
Accessories	Adhesive gel sheet plate (2 pcs.)(Already mounted), Non-woven simplified filter (Already mounted)/ AC adapter AD24-IT19

Accessories



Adapter specification

- ... AD24-IT19E is available on request.


Options and replacement parts

⇒P.37

Ion Parts Cleaner

A3 size is ideal for capturing dust with adhesive urethane gel at cell workbench

IPC-A3

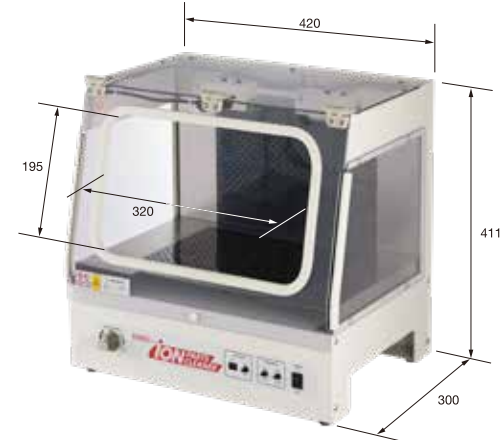

Code No.621612

Sensor	Air blow	Off timer
Diffused reflection type	Continuous/ Pulse	1 to 30 sec. (5 steps)
Applied voltage 24VDC	Air Pressure max 0.5MPa	Ionizer N-3x2pcs
	AC adapter 100~240V included	Airflow adjustment
		Gel sheet + fan filter
		Integrated hood/dust collector

- ▶ Since a dust collector is not needed, the current consumption is greatly reduced.
- ▶ Built-in ionizing nozzle emits air for removal of dust and static electricity in either continuous or pulse mode.
- ▶ Either paper pack filter or duct can be attached.



Regulator Built-in

Specifications

Model No.	IPC-A3
Ionizing method/Applied voltage	High voltage AC corona discharge/ 5.6kVAC(p-p)
Input voltage	24VDC ±5%
Rated current	1.31A
Dust collection airflow	1.13 m³/min (Built-in fan)
Static pressure	460Pa (Built-in fan)
Dust collection filter	Self-adhesive polyurethane gel sheets and paper pack filter
Dimensions	H411×W420×D300mm
Weight	9.5kg
Air supply house diameter	Tube fitting O/D10mm
Air consumption	265L/min(0.3MPa, Continuous mode)
Operating fluid	Clean dry air (0.1 ~ 0.5MPa)
Ozone production	0.05ppm or less(50mm)
Operating temp./ humidity	5~40°C / 35~65% RH (no dew condensation or freezing)
Accessories	AC adapter AD24-IT19, Adhesive gel sheet plate (Already mounted) x 2 pcs., Duct flange (for φ75mm), Paper pack filter (6 pcs.)

Accessories



Adapter specification


- ... AD24-IT19E is available on request.

Options and replacement parts

⇒P.37

Effective ion cleaning with HEPA filter and built-in ionizer

IPC-250CR

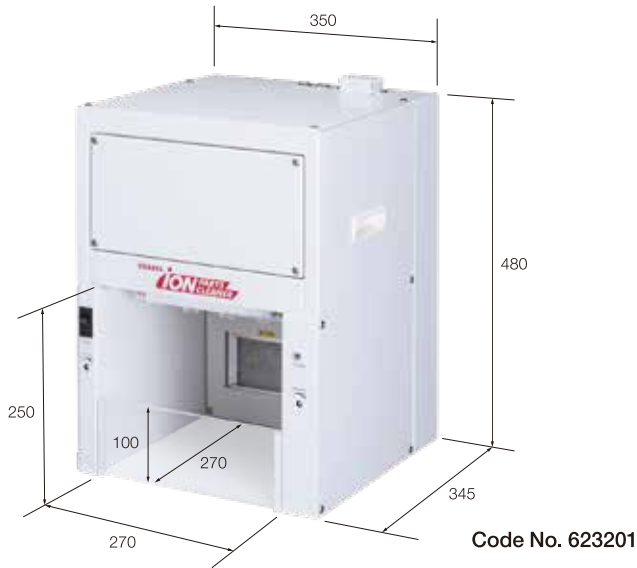

Code No. 623201

Air blow
Continuous

- Applied voltage 24V DC
- DC type ionizer
- AC adapter 100~240V (Option)
- Air discharge port
- Air volume regulator built-in
- HEPA filter

- ▶ Built-in HEPA filter emits clean air that removed 99.97% of particles 0.3µm and larger.
- ▶ Compressed air is not needed.
- Air circulation system does not exhaust air to the outside of the machine.

Built-in HEPA filter unit. Replaceable.




Specifications

Model No.	IPC-250CR
Ionizing method/Applied voltage	DC corona discharge / +6 kV, -3 ~ -7 kV
Input voltage	24V DC ±5%
Current consumption	4.5 A max. (except inrush)
Air volume	Max.1.5m³/min. (blower output value, provided that the built-in filter is not clogged)
Fan speed	Max.25m/sec. (blower output value, provided that the built-in filter is not clogged)
Dust collection filter	HEPA filter
Dimensions	H515 x W350 x D345 mm
Weight	Approx. 22kg
Noise	74 dBA (Maximum air flow, no clogging of built-in filter or deterioration of blower)
Operating temp./ humidity	5~ 40°C 35 ~ 65% RH (no dew condensation or freezing)
Accessories	Warning/caution label sticker

The generated ions are blown off downward with the air through the wide air discharge port.



Air circulation type, with no exhausted air.

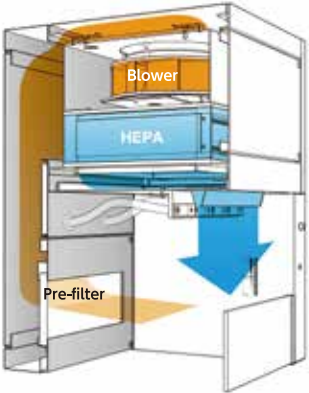

Option

Adapter specification



AC Adapter

AD24-150-PD4

EDP No.806146

I/P : 100V to 240 V AC, 50/60 Hz
O/P : 24V DC 5A



Options and replacement parts

⇒P.38

Dust Box Type Ion Cleaner
Small footprint design saves the desk space

IPC-V4



Code No. 621611

Sensor
Diffused reflection type

Air blow
Continuous/pulse blow selection

Off timer
1 to 30 sec. (5 steps)

- Applied voltage 24VDC
- Air Pressure max 0.6MPa
- Ionizer N-3×1 pc
- AC adapter 100~240V included
- Gel sheet + fan filter
- Integrated hood/dust collector

- ▶ Insert the charged item through the opening at the top, and the ion air is automatically blown out.
- ▶ The transparent hood makes the internal side look bright to see well contamination.
- ▶ Adhesive gel sheet increases efficiency in dust collection.
- ▶ Compact design for easy installation/relocation of the machine.

Specifications

Model No.	IPC-V4
Ionizing method/ Applied voltage	High voltage AC corona discharge (No.N-3 ionizer)/5.6kVAC p-p
Input voltage	24VDC±5% (when using the enclosed power adapter 100~240VAC, 50/60Hz)
Power Consumption	18W
Dust collection speed	1.13 m³/min (Built-in fan)
Static pressure	460 Pa (Built-in fan)
Dimensions	W200 x D289 x 297mm (without protrusions)
Weight	3.8 kg
Air joint	Tube fitting O/D8mm
Operating fluid	Clean dry air (0.1~0.3MPa)
Air consumption	161L/min (0.3MPa, Continuous mode)
Noise	88.3 dBA (0.3MPa, at 600mm)
Ozone production	0.05 ppm or less (50mm)
Operating temp./ humidity	5~40°C/ 35~65% RH (no dew condensation or freezing)
Accessories	AC adapter AD24-IT19 or AD24-IT19E, Adhesive gel sheet for internal wall side (w/magnet sheet) IPC-V4GB (already mounted), Adhesive gel sheet plate for bottom side, Paper pack filter (6pcs.) IPC-A3F, 2P-3P conversion adapter, Tilt adjustment spacer (2pcs.), Instruction manual (IPC-V4, N-3)



Less dust reattachment

Place the machine between the legs or between 2 workers to share.



Small footprint design saves the desk space.



Accessories

AC Adapter

AD-24-IT19

Code No. 806081

I/P : 100~240VAC 1.2A
O/P : 24VDC 1.9A

Adapter specification



AD24-IT19E is available on request.



Tilt adjustment spacer (2 pcs.)

Options and replacement parts

⇒P.38

EPA Products

Mat

Ideal for workbenches needing static-erasing measures

Wrist Strap

For ESD measures

Grounding Kit

For ESD mats

Anti-Fatigue Mat

Alleviate fatigue caused by standing for a long time

Surface Resistance Checker

Easy checking of surface resistance on floor or mat

Electrostatic Field Meter

Essential item for static electricity measurement
Visualize the static charge and discharge state

Why is VESSEL's EPA Working Mat our customer's top choice?

1

Creating an optimum EPA environment from a working table, a floor, to a human body with one-stop solution.


Our IEC61340-5-1 compliant products include the ESD protection items, the EPA working mats for workbenches, storage shelves, or trolleys, the EPA floor material for vinyl or painted floors, and the anti-static wrist straps.



2

Stable conductivity performance

Conductivity rates fluctuate frequently according to changes in humidity in the working environments. VESSEL's conductive rubber mats realize a "conductive performance" that complies with strict criteria.

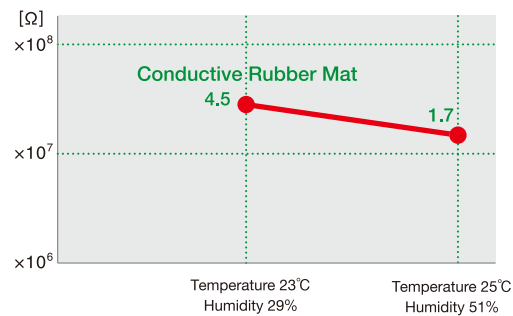

3

RoHS

Environmental Measures

Pb (lead) / Cd (cadmium) / Hg (mercury) / Hexavalent chromium / PBB (polybrominated biphenyl) / PBDE (polybrominated diphenyl ether) / DEHP, BBP, DBP, DIBP (phthalate esters)

The products with this mark in this catalogue are compliant with the RoHS directives (EU) (usage limit of the above 10 substances).

Note: For the updated information on RoHS compliant products, visit our homepage, because some products or sizes are under investigation or are not compliant at the time of publication of this catalogue.

Fan Type

Nozzle Type

Gun Type

Bar Type

Ion Parts Cleaner


EPA Products

Clean Walker

Options

EPA Working Mat · Conductive Rubber Mat

Controlling electroconductivity between $10^6\Omega$ and $10^7\Omega$, unsusceptible to the working environment. Ideal for workbenches requiring anti-static measures.

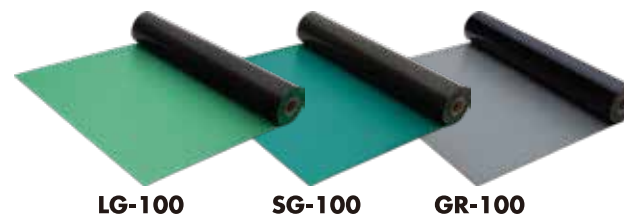

RoHS


10m ROLL
LG-100 Code No. 621464
SG-100 Code No. 621461
GR-100 Code No. 621490



Applications	Conductivity	Material	Directive
Work benches	$10^6 \leq R \leq 10^7 \Omega$	NBR+SBR	EPA RoHS

- Offers uniform, consistent conductive performance.
- Features a matte surface finish, reducing reflections and preventing eye fatigue.
- Heat resistant to solder drops.

Structure



Common Specifications

Model No.	LG-100	SG-100	GR-100
Color	Light green	Green	Gray
Size	W1.0m×L10m×t2.0m		
Conductivity	$10^6 \leq R \leq 10^7 \Omega$		
Weight	29kg/roll		
Material	NBR+SBR		

Grounding Cord

Connect to mat-connecting gel with a single touch

EPC-18



Specifications

Model No.	EPC-18
Cord length	Max.1.8m (0.5m when shrunken)
Resistance value	1MΩ
Accessories	Alligator clip

Code No. 621393

Wrist strap

Anti-Static Wrist Strap (10pcs/box)

EPS-05

RoHS

Code No. 621471

- Anti-static product, complying with JIS C 61340-4-6: 2016
- Contractile band with rubber woven, adjustable to the wrist
- Ground cord with 1M ohm current-limiting resistor

Specifications

Model No.	EPS-05
Weight	38g per piece, including alligator clip
Band length	Approx.190mm
Resistance	Approx. 1MΩ between the body and the ground cord
Contents	Wrist strap, Ground cord, Alligator clip, Instruction manual
Box size	H140xW115xD140mm(10pcs./ box)

Replacement

Wrist Strap Cord
No.EPS-05-C
 Code No. 621472



Weight	24g including alligator clip
Embedded resistor	Approx.1MΩ
Cord length	Max.2.5m (0.72m when shrunken)

ESD Mat Grounding Kit

From the floor or mat to the working bench, provides an optimal EPA environment

EPS-GK

RoHS




- Grounding kit for a conductive rubber mat.

Code No. 621484

Specifications


Model No.	EPS-GK
Ground cord	Approx.240cm (with crimp terminal)
Weight	45g
Resistance	1MΩ between the body and the crimp terminal of the ground cord
Contents	Ground cord with snap, Snap hardware/ Screw, Single-use punch, Instruction manual

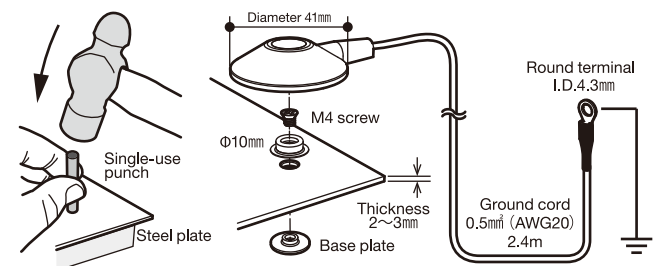

Conductive Anti-Fatigue Mat



Alleviate Fatigue caused by standing for a long time

AF-90/ AF-45

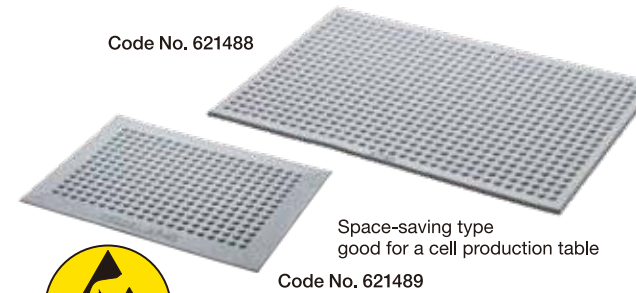

Applications	Conductivity	Material	Directive
For floor	$R_p \leq 10^9 \Omega$	NBR	EPA RoHS

- ▶ Conductive mat for fatigue alleviation from long standing work.
- ▶ Non-slip mat with embossments on the surface.
- ▶ Air pockets on the reverse side for spreading the body weight to alleviate fatigue.
- ▶ Light gray mat for easy detection of dirt, which may cause the conductive failure.
- ▶ 900mm x 600mm convenient size for the working stand for cell production.
- ▶ Space-saving 600x477mm good for one person. (AF-45)
- ▶ Inclined marginal area prevents workers from stumbling or falling. (AF-45)

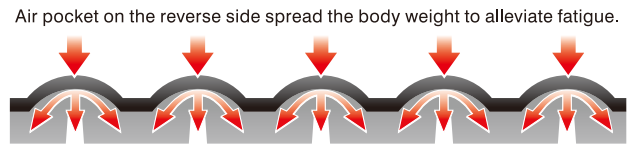

Specifications

Model No.	AF-90	AF-45
Size	W900mm×L600mm×t15mm	W600mm×L447mm×t15mm
Color	Gray	Gray
Conductivity	$R \leq 1.0 \times 10^9 \Omega$	$R \leq 1.0 \times 10^9 \Omega$
Weight	4.2kg	2.0kg
Material	NBR	NBR

*Grounding wire is not included in the product.

Surface Resistance Checker

Easy measurement of surface resistance on a floor or mat


SRC-01



Measurement
4 types

- One 9V battery
- With probes
- With a carrying case
- Auto-off

- ▶ All necessary for 4 types of measurement in one package.
- ▶ This can also measure temperature and humidity. (The values are for reference)
- ▶ Applied voltage selector switch enables to measure either the range from $1.0 \times 10^3 \sim 10^5 \Omega$ or from $1.0 \times 10^6 \sim 10^{12} \Omega$.

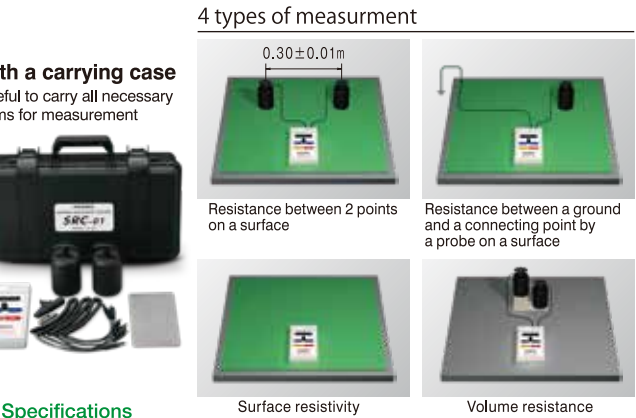

Specifications

Conformity standards	IEC61340-4-1, JIS-C2170
Measurement range	$10^3 \sim 10^{12} \Omega (\Omega/\text{sq})$
Applied voltage	10V ($R < 1.0 \times 10^6 \Omega$ or Ω/sq), 100V ($R \geq 1.0 \times 10^6 \Omega$ or Ω/sq)
Display	Triple-digit LCD (□.□□ e□□) ex.: 3.14 e10 → 3.14×10 ¹⁰
Power source	9 V battery x 1 (Type: 006P, recommended alkaline battery)
Dimensions	L190×W101.5×D54.7mm
Weight	Body: Approx. 340 g (including a battery); gross weight: Approx. 6.2 kg (including the carrying case)
Operating temp./ humidity	15 ~ 40°C / 60% RH or less
Material	Body case: ABS resin
Accessories	Probe (outer diameter: about Φ66 mm, about 2.3 kg): 2 Curled cord for a body earth (banana plugs at both ends): 1 Curled cord for measurement for the point-to-point resistance and resistance to ground (banana plug/mono plug): 2 Crocodile clip: 1, Large crocodile clip: 1, Stainless plate (142mm×67mm): 1 Carrying case: 1, 9 V battery (006P type: manganese dry battery): 1 Manuals

The calibration certificate can be issued (option).

Electrostatic Field Meter


Visualizing invisible static electricity
Peak hold supports long-time measurements

Eye-02



Measurement	Measurement	LCD display
Charge potential	Ion balance	Bar graph+3 digits
One 9V battery	Ion balance measurement plate	Measuring distance 25 mm
		Auto power off
		Out of measuring range alarm
		Peak hold function
		Battery level display
		Anti-Drop strap





- ▶ Cross mark LED for easy adjustment of the best measurement distance.
- ▶ Displays the max value (peak value), and the temporal suspending value.
- ▶ Backlight, making the screen easy to read even in the dark.
- ▶ Mountable on a tripod.

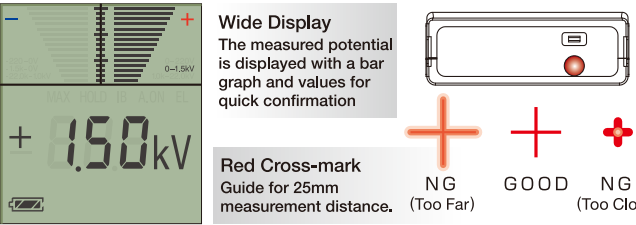

Specifications

Model No.	EYE-02
Charge potential measurement	$\pm 0 \sim \pm 1.50 \text{ kV}$ (LO range)/ $\pm 1.0 \sim \pm 20.0 \text{ kV}$ (HI range)
Ion balance measurement	0 ~ $\pm 200 \text{ V}$
Response time	within 1sec
Accuracy	10% (Indicated value)
Power	9VDC (006P battery x 1pc)
Charged potential measurement distance	25mm±0.5mm
Dimensions	L123×W70×D25mm
Weight	170 g / ion balance measurement plate 30g
Operating temp./ humidity	0 ~ 50°C / 80% RH or less
Accessories	Ion balance measurement plate, Grounding cord, alligator clip, Soft case

◆Complies with ISO 9000 traceability standards.
Calibration tables and certificates can be issued for this instrument. (Option)

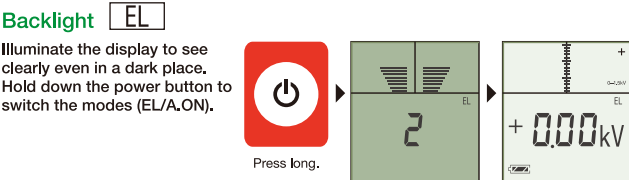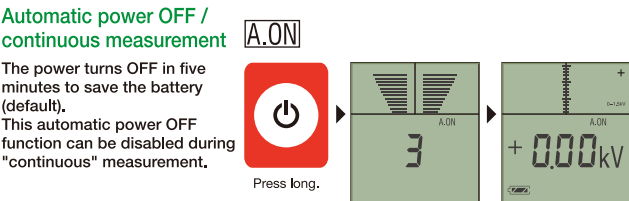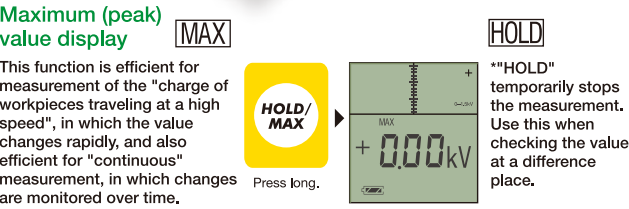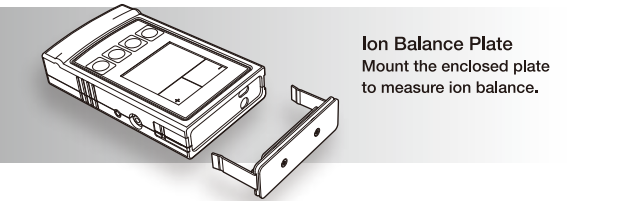

Clean Walker



CW-900B

5mm thick

Capture dust off shoe soles

Why is VESSEL's Clean Walker our customer's top choice?

1

Non-peeling type adhesive mat


There's no need sacrifice cleanliness by limiting the number of sheets peeled to save costs.



2

Reliable dust removal

Self-adhesiveness of polyurethane resin is the key.The thick mat flexibly contacts against shoe treads and carefully catches dust between them.

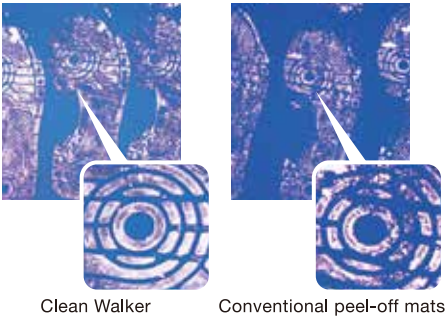

3

Wash & dry to restore adhesiveness


Wet the surface with water, alcohol or diluted household detergent, and the dirt will lift right up. Wash and dry the mat well to restore the original adhesiveness.



Clean Walker

High elasticity.
Outstanding dust collection performance


CW-900B

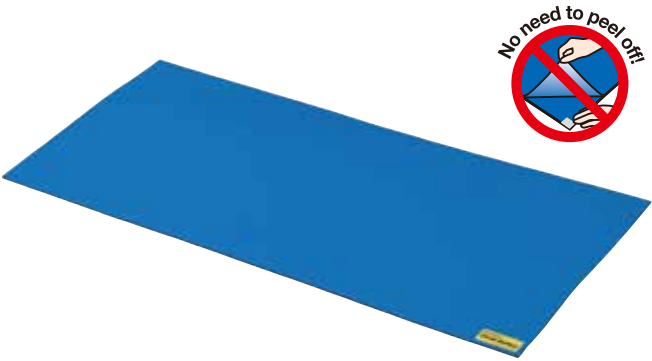

Code No. 621485

Applications	Material	Washable	Directive
For indoor use (especially in front of clean rooms)	Polyurethane	✓	RoHS

- ▶The 5mm high elasticity mat.
- ▶Powerfully catches dust from shoe soles.
- ▶Collected dust can be easily wiped off with a wet cloth.
(Wash with water containing alcohol or neutral detergent, if dust remains.)

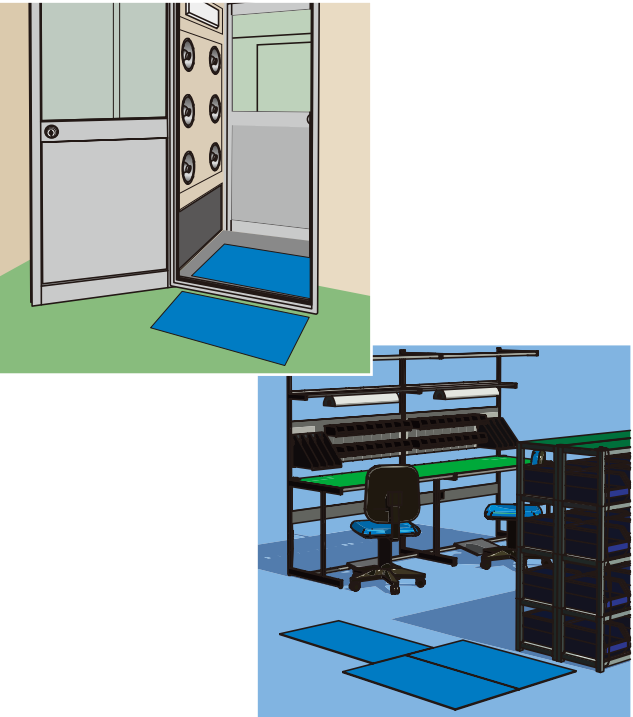

Specifications

Model No.	CW-900B
Color	Blue
Size	W900mm×L500mm×t5mm
Conductivity	Insulator
Weight	2.4kg
Material	Polyurethane

High Power Ionizing Nozzle

Good for Highly Charged Products

Nozzle type ionizer suitable for installation in an automated production line

HPN-1



Code No. 623043




High Voltage Transformer	Ion balance	Decay time
Coiled, AC (GP-1)	Adjustable on the GP-1	0.5 sec. or less
Applied voltage 3.5kVAC	Air Pressure max 0.7MPa	GP-1 Option
	GP-1 Option	AC adapter Option

- ▶ Titanium discharge needle (discharge electrode). Less-wearing titanium provides the long-term stable ionizing performance.
- ▶ The high voltage cable is shielded so that it is less affected by the external electrical noises.
- ▶ High speed ionizing performance with compressed air. Ultra-compact and light-weight model suitable for installation in equipment.


Specifications

Model No.	HPN-1
Applied high voltage	high voltage Power Supply Unit GP-1 4kV
Ionizing method	AC corona discharge (Structure: Direct-coupled *1)
Applied voltage / Frequency	3.5kVAC / 50/60Hz *2
Operating fluid / Input pressure	Clean air/Max.input pressure:0.7MPa *3
Operating temp./ humidity	0~45℃/10~90%RH(no dew condensation or freezing)
Installation distance	Approx.50~300mm (between the charged product and the nozzle tip of the ionizer)
Decay time	Approx. 0.5 sec. (Air pressure:0.3MPa, Distance:150mm)
Ion balance	Adjustable on GP-1 4kV *4
Installation place	Indoor
Protective circuit	High Voltage Power Supply GP-1 4kV has high voltage anomaly detection function and automatic stop circuit.
High voltage cable	3m (standard), silicon shielded cable *5 (High voltage connector CON-4)
Air connection	One-touch joint (Applicable tube O/D 6mm)
Weight	Approx.350g, including high pressure cable (3m), standard mounting hardware, and hihg pressure connector.
Noise	Approx. 95dBA (Air pressure:0.3MPa, Distance: 1m)
Air consumption	Approx. 100L/min (Air pressure:0.3MPa)
Accessories	High voltage warning sticker, Instruction manual

*1: Do not touch the electrode when applying current; otherwise it may bring electric shocks. *2: Use the high voltage power supply unit GP-1 4kV. *3: DO NOT SUPPLY AIR WITH MORE THAN THE DESIGNATED PRESSURE, BECAUSE OF SERIOUS RISK OF DAMAGE OR BREAKAGE ON THE BODY AND OTHER PARTS. *4: Charged plate monitor or an equivalent is required for ion balance adjustment. *5: The length of the cable can be customized. But the total length of the multiple high voltage cables with the GP-1 should be 9m or less.

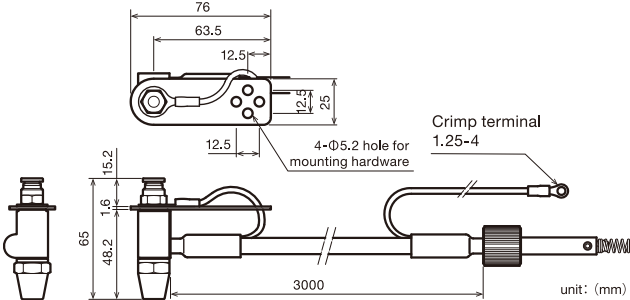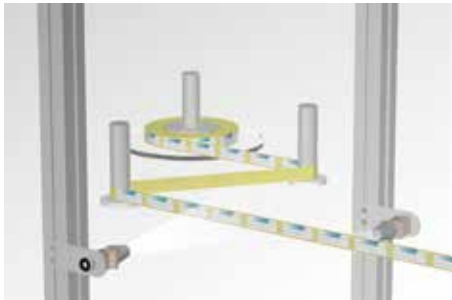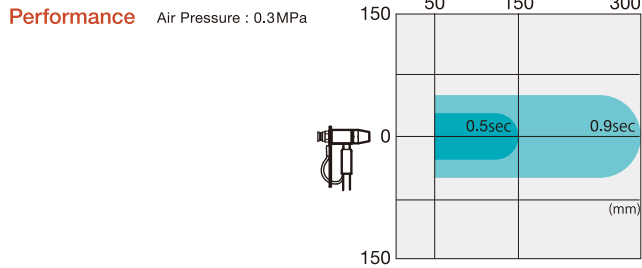

Example of connection

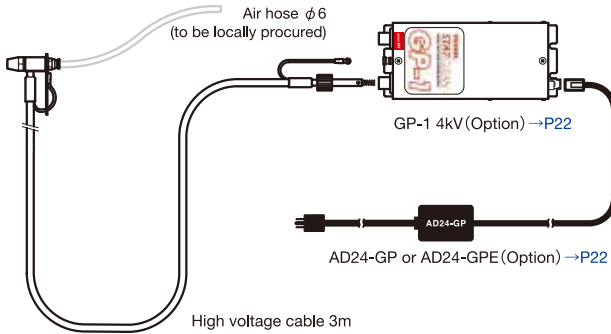

High Power Ionizing Flexible Nozzle

Good for Highly Charged Products

Pin-point static electricity removal even in a place difficult for installation

HPF-1



Code No. 623048



High Voltage Transformer	Ion balance	Decay time
Coiled, AC (GP-1)	Adjustable on the GP-1	1sec. or less
Applied voltage 3.5kVAC	Air Pressure max 0.4MPa	GP-1 Option
	GP-1 Option	AC adapter Option

- ▶ Titanium discharge needle (discharge electrode). Less-wearing titanium provides the long-term stable ionizing performance.
- ▶ The high voltage cable is shielded so that it is less affected by the external electrical noises.
- ▶ Free angle adjustment and pin-point ionizing from a distant place. 300mm flexible tube enables to adjust the ion emission angle freely. It is possible to perform the pin-point neutralization on a charged product. * Fix the tip of the HPF-1 with a hardware or alike, so that it does not slip, when using it by bending approximately 30° or more. (Minimum bending radius: inside dimension radius 60mm)
- ▶ High speed ionizing performance with compressed air. Ultra-compact and light-weight model suitable for installation in equipment.


Specifications

Model No.	HPF-1
Applied high voltage	high voltage Power Supply Unit GP-1 4kV
Ionizing method	AC corona discharge (Structure: Direct-coupled *1)
Applied voltage / Frequency	3.5kVAC / 50/60Hz *2
Operating fluid / Input pressure	Clean air/Max.input pressure:0.4MPa *3
Operating temp./ humidity	0~+45℃/10~80%RH(no dew condensation or freezing)
Installation distance	Approx.50~300mm (between the charged product and the nozzle tip of the ionizer)
Decay time	Approx.1sec. (Air pressure:0.3MPa, Distance:150mm)
Ion balance	Adjustable on GP-1 4kV *4
Installation place	Indoor
Protective circuit	High Voltage Power Supply GP-1 4kV has high voltage anomaly detection function and automatic stop circuit.
High voltage cable	3m (standard), silicon shielded cable *5 (High voltage connector CON-4)
Air connection	One-touch joint (Applicable tube O/D 6mm)
Weight	Approx.690g, including high pressure cable (3m),and high pressure connector.
Noise	Approx. 86dBA (Air pressure:0.3MPa, Distance: 1m)
Air consumption	Approx. 110L/min (Air pressure:0.3MPa)
Accessories	High voltage warning sticker, Instruction manual

*1: Do not touch the electrode when applying current; otherwise it may bring electric shocks. *2: Use the high voltage power supply unit GP-1 4kV. *3: DO NOT SUPPLY AIR WITH MORE THAN THE DESIGNATED PRESSURE, BECAUSE OF SERIOUS RISK OF DAMAGE OR BREAKAGE ON THE BODY AND OTHER PARTS. *4: Charged plate monitor or an equivalent is required for ion balance adjustment. *5: The length of the cable can be customized. But the total length of the multiple high voltage cables with the GP-1 should be 9m or less.

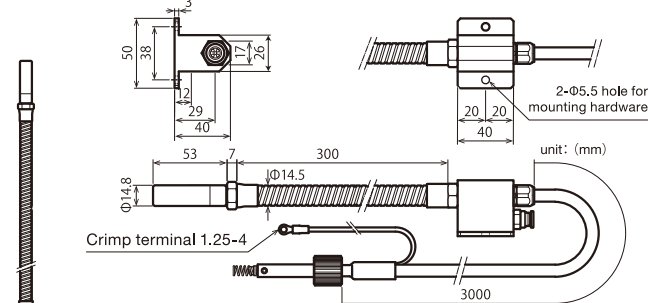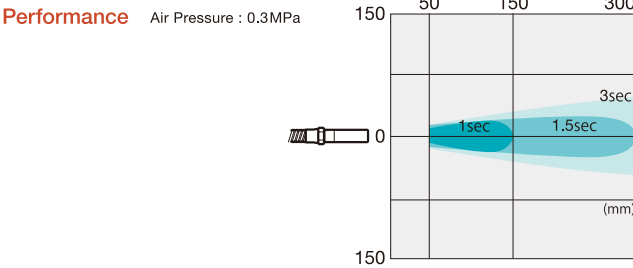

Example of connection

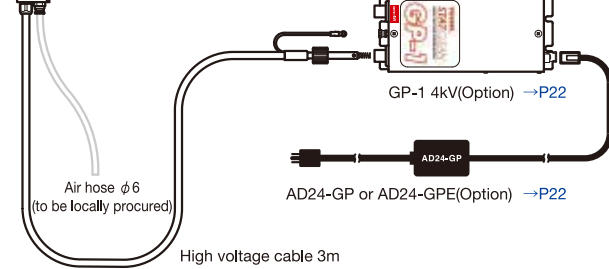

High Power Ionizing Gun

Good for Highly Charged Products
For neutralization of charged products or dust removal before painting

HPG-1



HPG-1 Code No. 623046
(High voltage cable 3m)

HPG-1-4.5M Code No. 623050
(High voltage cable 4.5m)



High Voltage Transformer		Ion balance	Decay time
Coiled, AC (GP-1)		Adjustable on the GP-1	0.5 sec. or less
Applied voltage 3.5kVAC	Air Pressure max 0.7MPa	GP-1 Option	AC adapter Option

- ▶ Titanium discharge needle (discharge electrode). Less-wearing titanium provides the long-term stable ionizing performance.
- ▶ The high voltage cable is shielded so that it is less affected by the external electrical noises.
- ▶ Robust and easy handling ionizing gun. The body of the ionizing gun is made by robust aluminum die-casting. Easy handling large trigger for superior operability. Compact model for elimination of both static electricity and dust.

Specifications

Model No.	HPG-1
Applied high voltage	High voltage Power Supply Unit GP-1 4kV
Ionizing method	AC corona discharge (Structure: Direct-coupled *1)
Applied voltage / Frequency	3.5kVAC / 50/60Hz *2
Operating fluid / Input pressure	Clean air/Max.input pressure:0.7MPa *3
Operating temp./ humidity	0~+45℃/10~90%RH (no dew condensation or freezing)
Installation distance	Approx.50~300mm (between the charged product and the nozzle tip of the ionizer)
Decay time	Approx. 0.5 sec. (Air pressure:0.3MPa, Distance:150mm)
Ion balance	Adjustable on GP-1 4kV *4
Installation place	Indoor
Protective circuit	High Voltage Power Supply GP-1 4kV has high voltage anomaly detection function and automatic stop circuit.
High voltage cable	3m (standard), silicon shielded cable *5 (High voltage connector CON-4)
Air connection	One-touch joint (Applicable tube O/D 8mm)
Weight	Approx. 560g,including high voltage cable (3m) and high voltage connector.
Noise	Approx. 95dBA (Air pressure:0.3MPa, Distance: 1m)
Air consumption	Approx. 110L/min (Air pressure:0.3MPa)
Accessories	High voltage warning sticker, Air consent, Instruction manual

*1: Do not touch the electrode when applying current; otherwise it may bring electric shocks. *2: Use the high voltage power supply unit GP-1 4kV. *3: DO NOT SUPPLY AIR WITH MORE THAN THE DESIGNATED PRESSURE. BECAUSE OF SERIOUS RISK OF DAMAGE OR BREAKAGE ON THE BODY AND OTHER PARTS. *4: Charged plate monitor or an equivalent is required for ion balance adjustment. *5: The length of the cable can be customized. But the total length of the multiple high voltage cables with the GP-1 should be 9m or less.

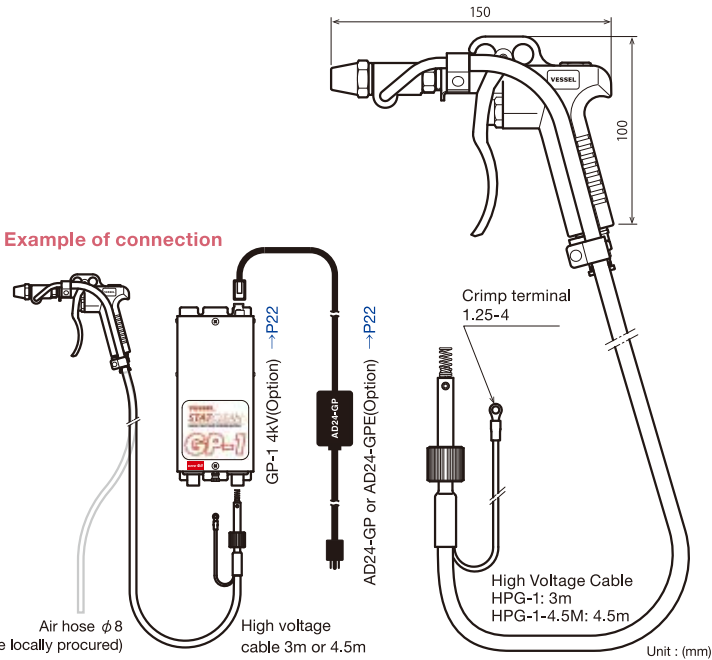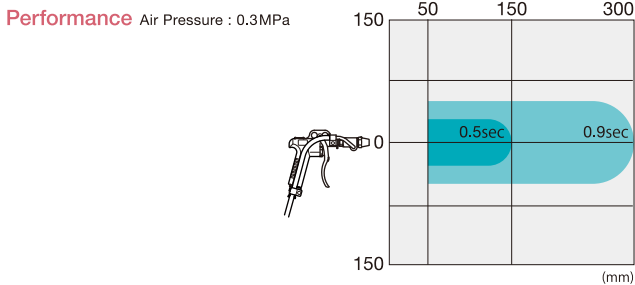

High Power Ionizing Bar

Good for Highly Charged Products
Super slim model, designed for installation in a cramped space

HPB-series




HPB-300 Code No. 623316
HPB-600 Code No. 623336
HPB-810 Code No. 623350
HPB-1005 Code No. 623363
HPB-1200 Code No. 623376
HPB-1500 Code No. 623396
HPB-1800 Code No. 623416

- ▶ Titanium discharge needle (discharge electrode). Less-wearing titanium provides the long-term stable ionizing performance. The needles are allocated every 15mm on the bar, allowing to generate many ions effectively. Optimum for a high speed film transfer application.
- ▶ The high voltage cable is shielded so that it is less affected by the external electrical noises.
- ▶ Super slim ionizing bar: 16.4x22.4mm (sectional dimensions). Suitable for a cramped space.
- ▶ Option: Air Assist Bar (Model No. AAB) can be used for more quick and farther dust removal and static elimination. The size can be customized in 15 mm increments of 75 mm or more in length according to the size of the HPB bar.

Specifications

Model No.	HPB-300/600/810/1005/1200/1500/1800
Applied high voltage	High Voltage Power Supply Unit GP-1 4kV
Ionizing method	Pulse AC corona discharge (Structure: Direct-coupled*1)
Applied voltage / Frequency	3.5 kVAC /50/60 Hz *2
Operating temp./ humidity	0~+45℃/10~85%RH(no dew condensation or freezing)
Installation distance	Approx.50~100mm (between the charged product and the nozzle tip of the ionizer)
Decay time	Approx. 2 secs. (No compressed air, Distance: 100mm)
Ion balance	Adjustable on GP-1 4kV *3
Installation place	Indoor
Protective circuit	High Voltage Power Supply GP-1 4kV has high voltage anomaly detection function and automatic stop circuit.
High voltage cable	3m (standard), silicon shielded cable*4 (High voltage connector CON-4)
Weight	See below (the weight of the cable is not included)
Accessories	Instruction manual, High voltage cable (already mounted), Mounting bolt M5 (already mounted)

*1: Do not touch the electrode when applying current; otherwise it may bring electric shocks. *2: Use the high voltage power supply unit GP-1 4kV. *3: Charged plate monitor or an equivalent is required for ion balance adjustment. *4: The length of the cable can be customized. But the total length of the multiple high voltage cables with the GP-1 should be 9m or less.

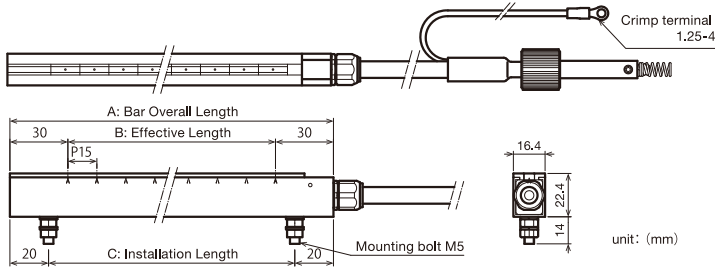


Dimensions/No. of Needle Electrode

Model No.	A (mm)	B (mm)	C (mm)	No. of needle electrode	Weight (kg)
HPB-300	300	240	260	17	0.16
HPB-600	600	540	560	37	0.32
HPB-810	810	750	770	51	0.44
HPB-1005	1005	945	965	64	0.54
HPB-1200	1200	1140	1160	77	0.65
HPB-1500	1500	1440	1460	97	0.81
HPB-1800	1800	1740	1760	117	0.97

High Voltage Transformer	Ion balance	Decay time
Coiled, AC (GP-1)	Adjustable on the GP-1	2 sec. or less
Applied voltage 3.5kVAC	GP-1 Option	AC adapter Option



Example of connection

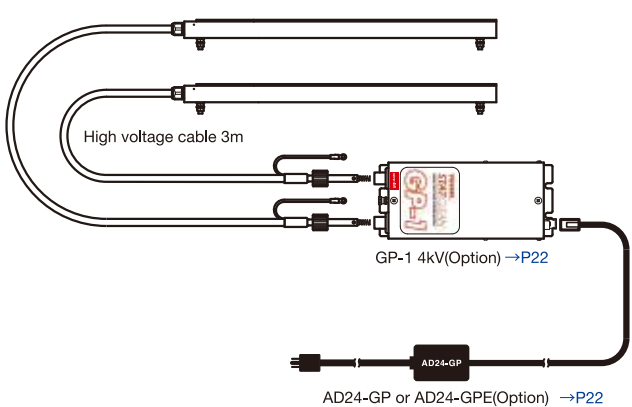

Options and Replacement parts

Subject to change without prior notice

Needle Electrode Unit / Front Cover



F-6BFH
Code No.806097
Use with: F-6BFE



F-6H
Code No.806094
Use with: F6RCLE, F6RST-E



F-120RCH
Code No.806129
Use with: F120R-E



F-120SCH
Code No.806128
Use with: F120S-E



L-90CH
Code No.806132
Use with: L-90-E

Filter



SDJ-08F
Code No.806039
Use with: F6RCLE, F6RST-E



F-120FS
Code No.806123
Use with: F120R-E, F120S-E



L-90F
Code No.806133
Use with: L-90-E, F120R-E, F120S-E



L-90FS
Code No.806134
Use with: L-90-E



CF-300F
Code No.806141
Use with: CF-300/600

AC Adapter



AD24-ITF6
● Code No.806095
AD24-ITF6E
● Code No.806138
Use with: F6RCLE, F6RST-E
I / P : 100~240VAC 0.4A
O / P : 24VDC 0.75A



AD24-IT
● Code No.806051
AD24-ITE
● Code No.806135
Use with: F120R-E, F120S-E, CF-300
I / P : 100~240VAC 0.4A
O / P : 24VDC 0.75A



AD24-IT37
● Code No.806131
AD24-IT37E
● Code No.806139
Use with: L-90-E
I / P : 100~240VAC 1.5A
O / P : 24VDC 3.75A



AD24-IT19
● Code No.806081
AD24-IT19E
● Code No.806137
Use with: CF-600
I / P : 100~240VAC 50/60Hz
O / P : 24VDC 2.7A

For Gun / Nozzle Type



G-7SN
Code No.806057
Use with: G7R-E



G-7THN
Code No.806063
Use with: G7R-E



G-9HFN
Code No.806154
Use with: G-9



BB-ZSN
Code No.621708
Use with: G7R-E, N-1
N-3, G2-E*, G-9*
*When mounted, there is a gap between the option nozzle and the body due to the difference in the thread area length.



G-9WN
Code No.806151
Use with: G7R-E, N-1
N-3, G2-E*, G-9*
*When mounted, there is a gap between the option nozzle and the body due to the difference in the thread area length.



N-1SN
Code No.806120
Use with: N-1, N-3, G2-E



G-7B
Code No.806059
Use with: G7R-E



G-7SB
Code No.806062
Use with: G7R-E



G-9UTP
Code No.806148
Use with: G-9



G-9MC
Code No.806147
Use with: G-9



G-7DR
Code No.806061
Use with: G7R-E
N-1, N-3, G2-E, G-9



G-7SC
Code No.621373
Use with: G7R-E
N-1, N-3, G2-E



G-7F
Code No.621702
Use with: G7R-E
N-1, N-3, G2-E
Filter eliminates at least 99% of particles with a diameter of 0.01 μm or greater. Install a 1 μm to 10 μm air filter and mist separator on your air compressor before using this item.



GN-H
Code No.806124
Use with: G7R-E, N-1, N-3, G2-E, G-9



AD24-ITC (2.5m)
● Code No.806060
AD24-ITC-E (2.5m)
● Code No.806067
Use with: G7R-E, G2-E
I / P : 100~240VAC 0.4A
O / P : 24VDC 0.75A



AD24-ITCS (1.5m)
● Code No.806083
AD24-ITCS-E (1.5m)
● Code No.806084
Use with G2-E
I / P : 100~240VAC 0.4A
O / P : 24VDC 0.75A



G-7EC5
Code No.621703
Use with: G7R-E
(Should be used together with AD24-ITC or AD24ITC-E)



G-7EC10
Code No.621704
Relay cables are used to connect the G7R-E to its dedicated power supply transformer (AD24-ITC-E).

Adapter specification



Adapter specification



For C-series



C-00HR8
Code No.806150



CT-5
Code No.621709
When using AC adapter, Power Supply Cable (CT-5) is necessary.



RMC-01
Code No.806104



AD24-IT
● Code No.806051
AD24-ITE
● Code No.806135
I / P : 100~240VAC 0.4A
O / P : 24VDC 0.75A
Operation : One bar



AD24-IT19
● Code No.806081
AD24-IT19E
● Code No.806137
I / P : 100~240VAC 1.2A
O / P : 24VDC 1.9A
Operation : Up to 3 bars
(Please consult us for more detail)

For SL-series



GP-EC2.5
Code No.623053



GP-EC5
Code No.623054



Plug for the SL, SH, SH-G3, and SH-SP2



SH-SP2
Code No.621552
(Connecting cable is required.)



SL-EC2.5
Code No.621884



SJ-EC5
Code No.623052



Plug for the SJ, SL, SH, SH-G3, and SH-SP2



SJ-00HR*
Code No. 623055

For Ion Parts Cleaner



IPC-A4F
Code No.806092
Use with: IPC-A4



IPC-A3F
Code No.806126
Use with: IPC-A3



IPC-A4G
Code No.806091
Use with: IPC-A4, IPC-A3
(two sheets required per unit)



GN-H
Code No.806124
Use with: IPC-A4, IPC-A3



AD24-IT19
● Code No.806081
AD24-IT19E
● Code No.806137
Use with IPC-A4, IPC-A3
I / P : 100~240VAC 1.2A
O / P : DC24V 1.9A



IPC-250CRPF
Code No.623203
Use with : IPC-250CR



IPC-250CRHF
Code No.623202
Use with : IPC-250CR



SDJ-05RH
Code No.806044
Use with : IPC-250CR



AD24-150-PD4
● Code No.806146
I / P : 100~240VAC, 50/60 Hz
O / P : 24V DC 5A
Use with : IPC-250CR

Others



CF-300B
Code No.806140
Use with: CF-300/600



F-6C
Code No.806098
Use with: F-6BFE, F-6RCLE, F-6RSTSE